

Bang & Olufsen

Tape Deck Version II

Beocord 3500/4500

Tape Deck Version II

Beocord 3500/4500

ABO-CENTER V/HENRIKSENS
ELEKTRONIK

Indklæbes i Serviceanvisningen Beocord 4500 (3538714/3538713)
Paste into Service Manual Beocord 4500 (3538714/3538713)
In Serviceanleitung Beocord 4500 (3538714/3538713) einkleben
A coller le Manual d'entretien pour Beocord 4500 (3538714/3538713)


3538772

5-91



DIAGRAM A (AF and Control)

8004869

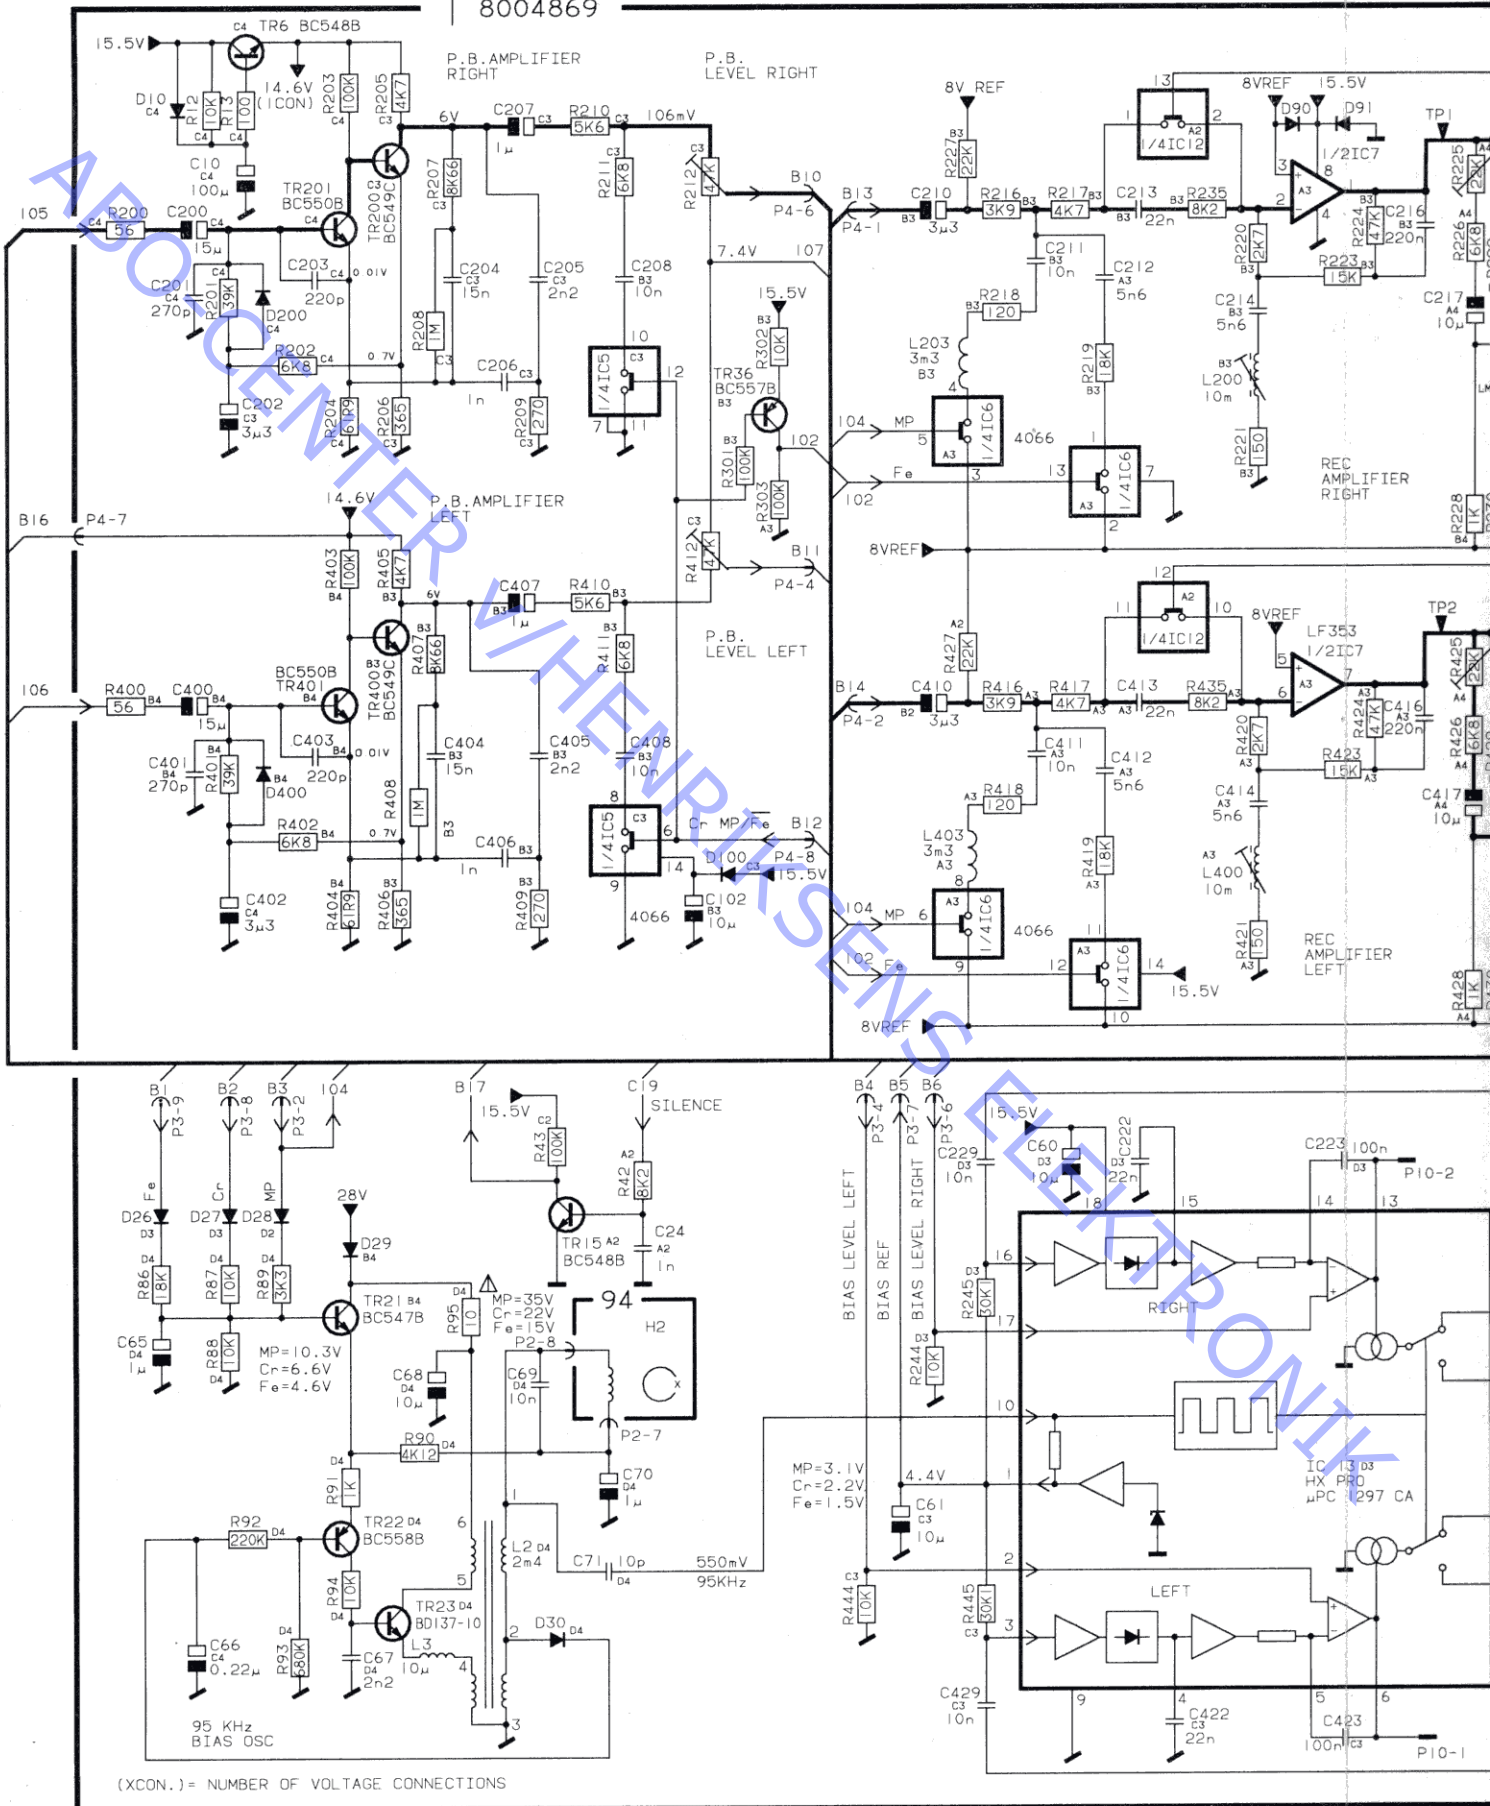



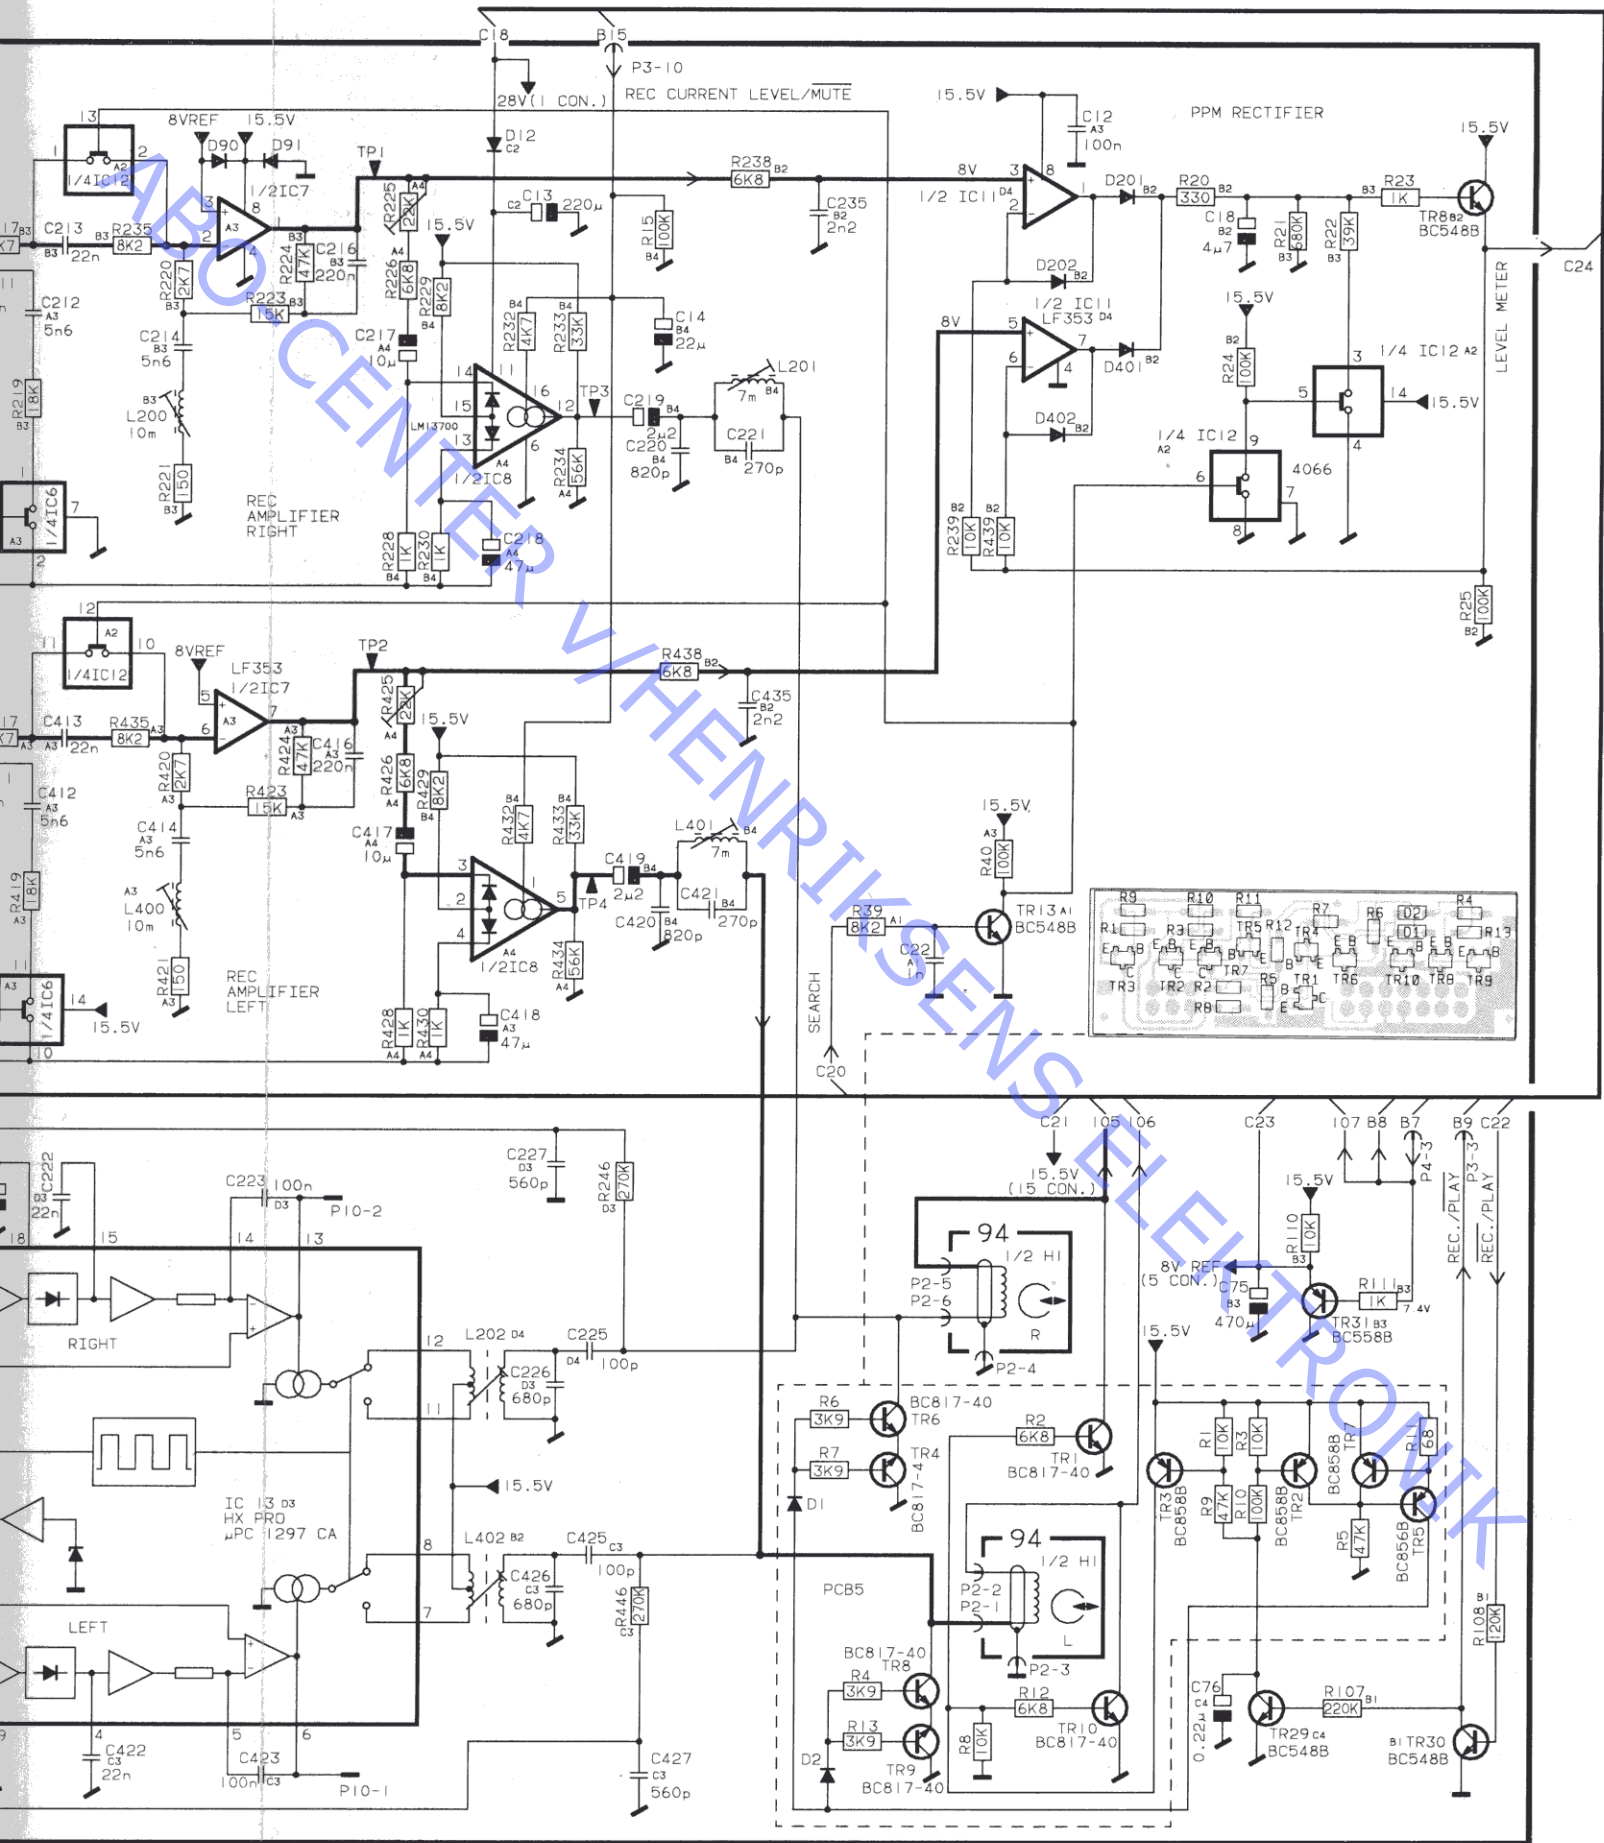


DIAGRAM B (Dolby NR, Bias Switch and Tape Type Logic)

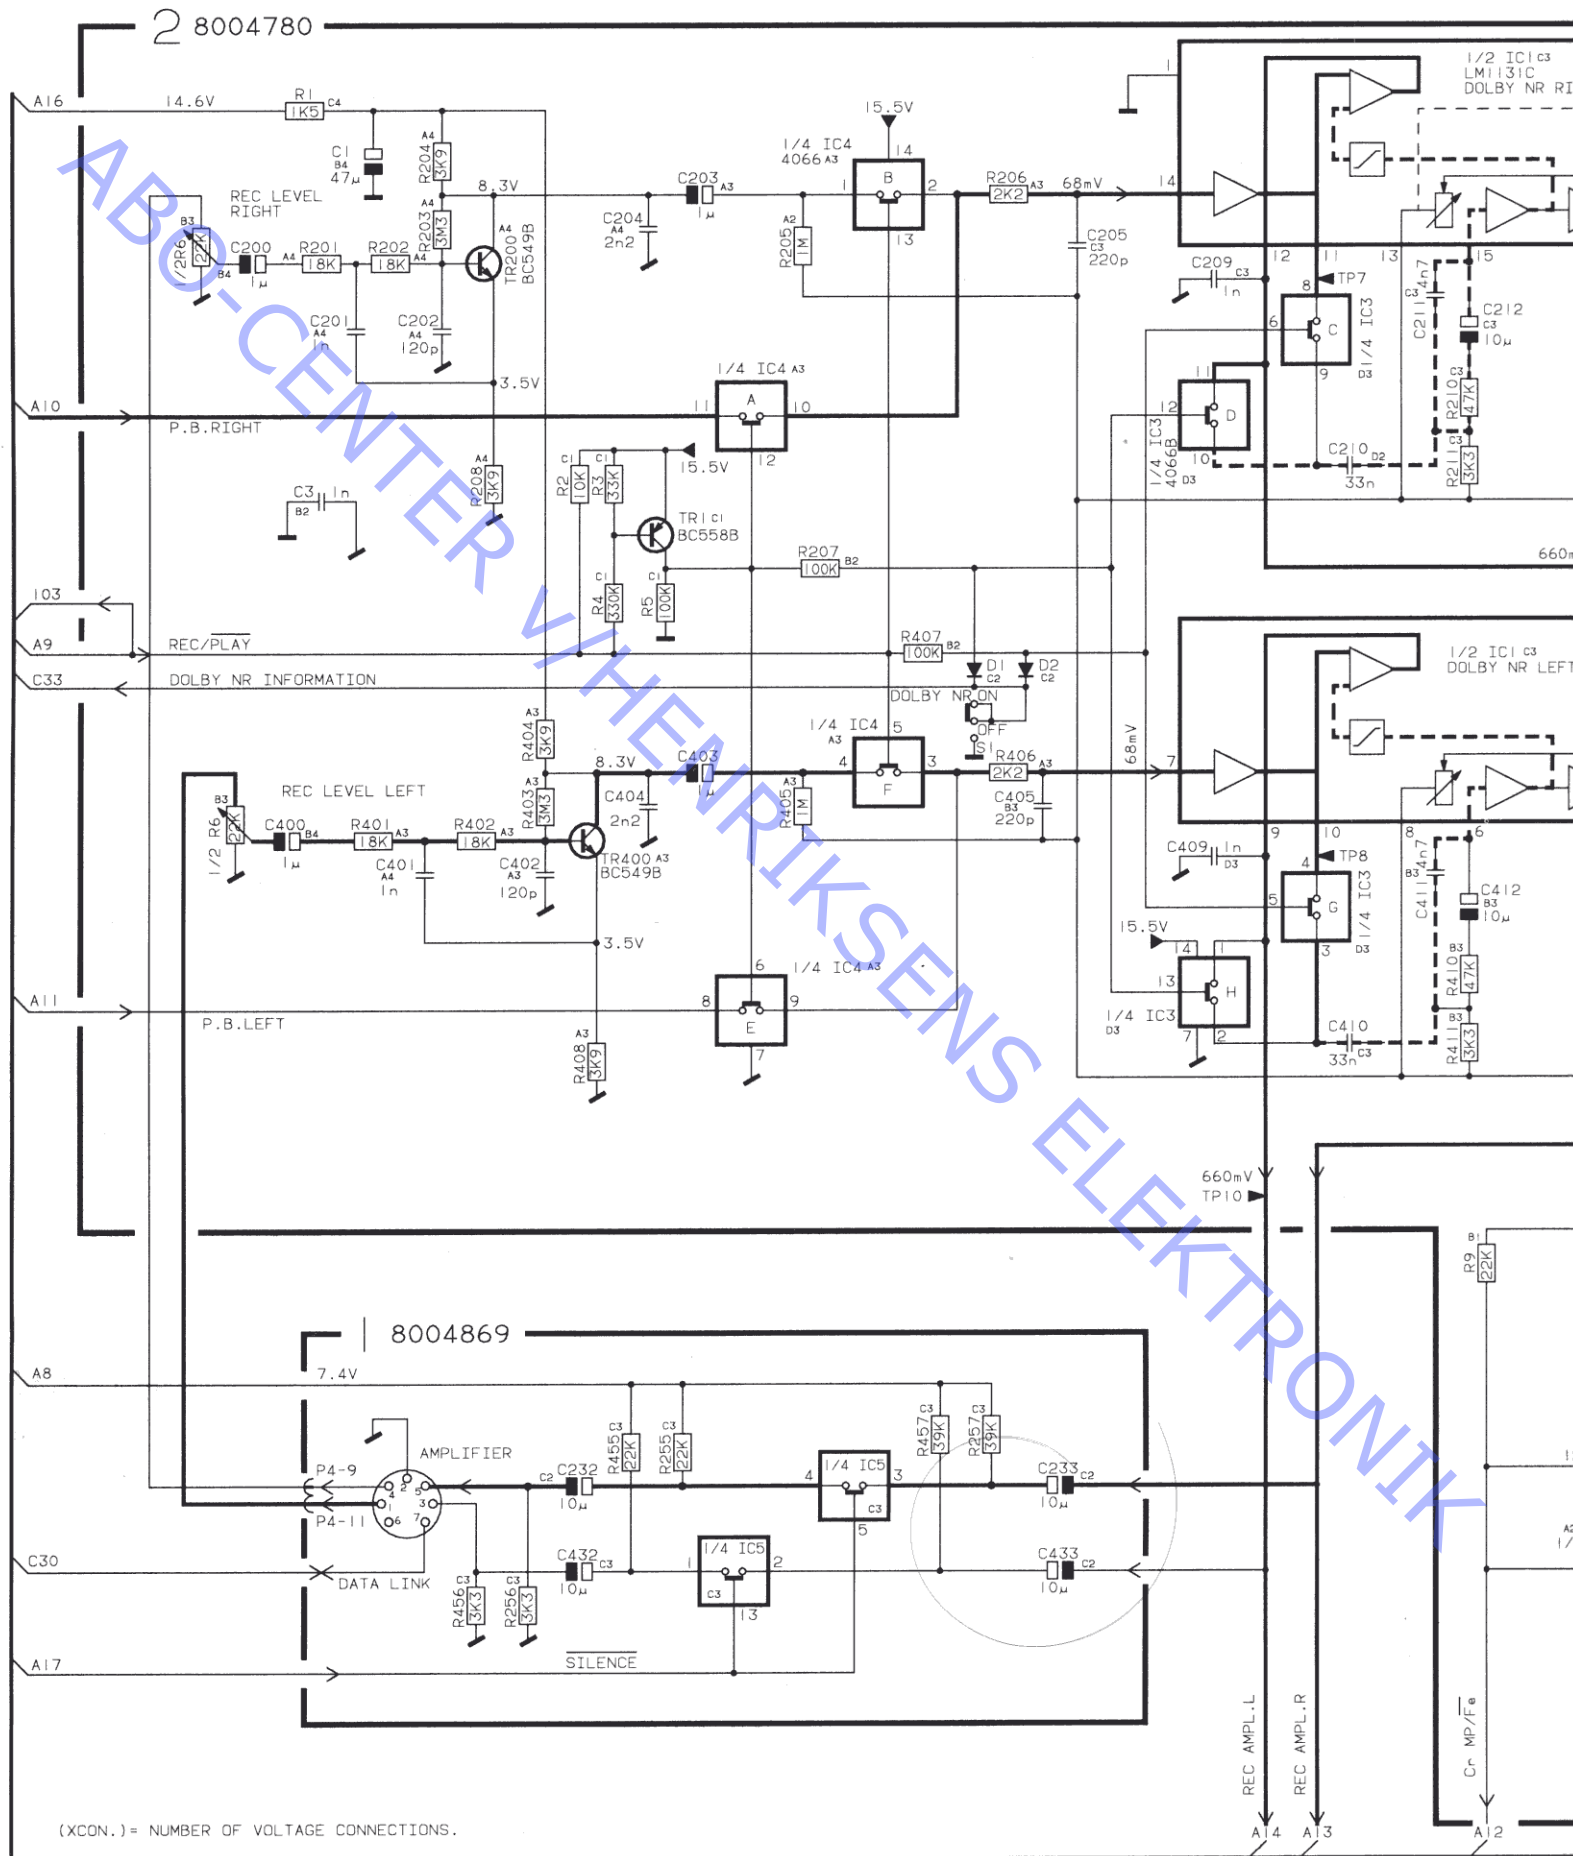


(XCON.) = NUMBER OF VOLTAGE CONNECTIONS.

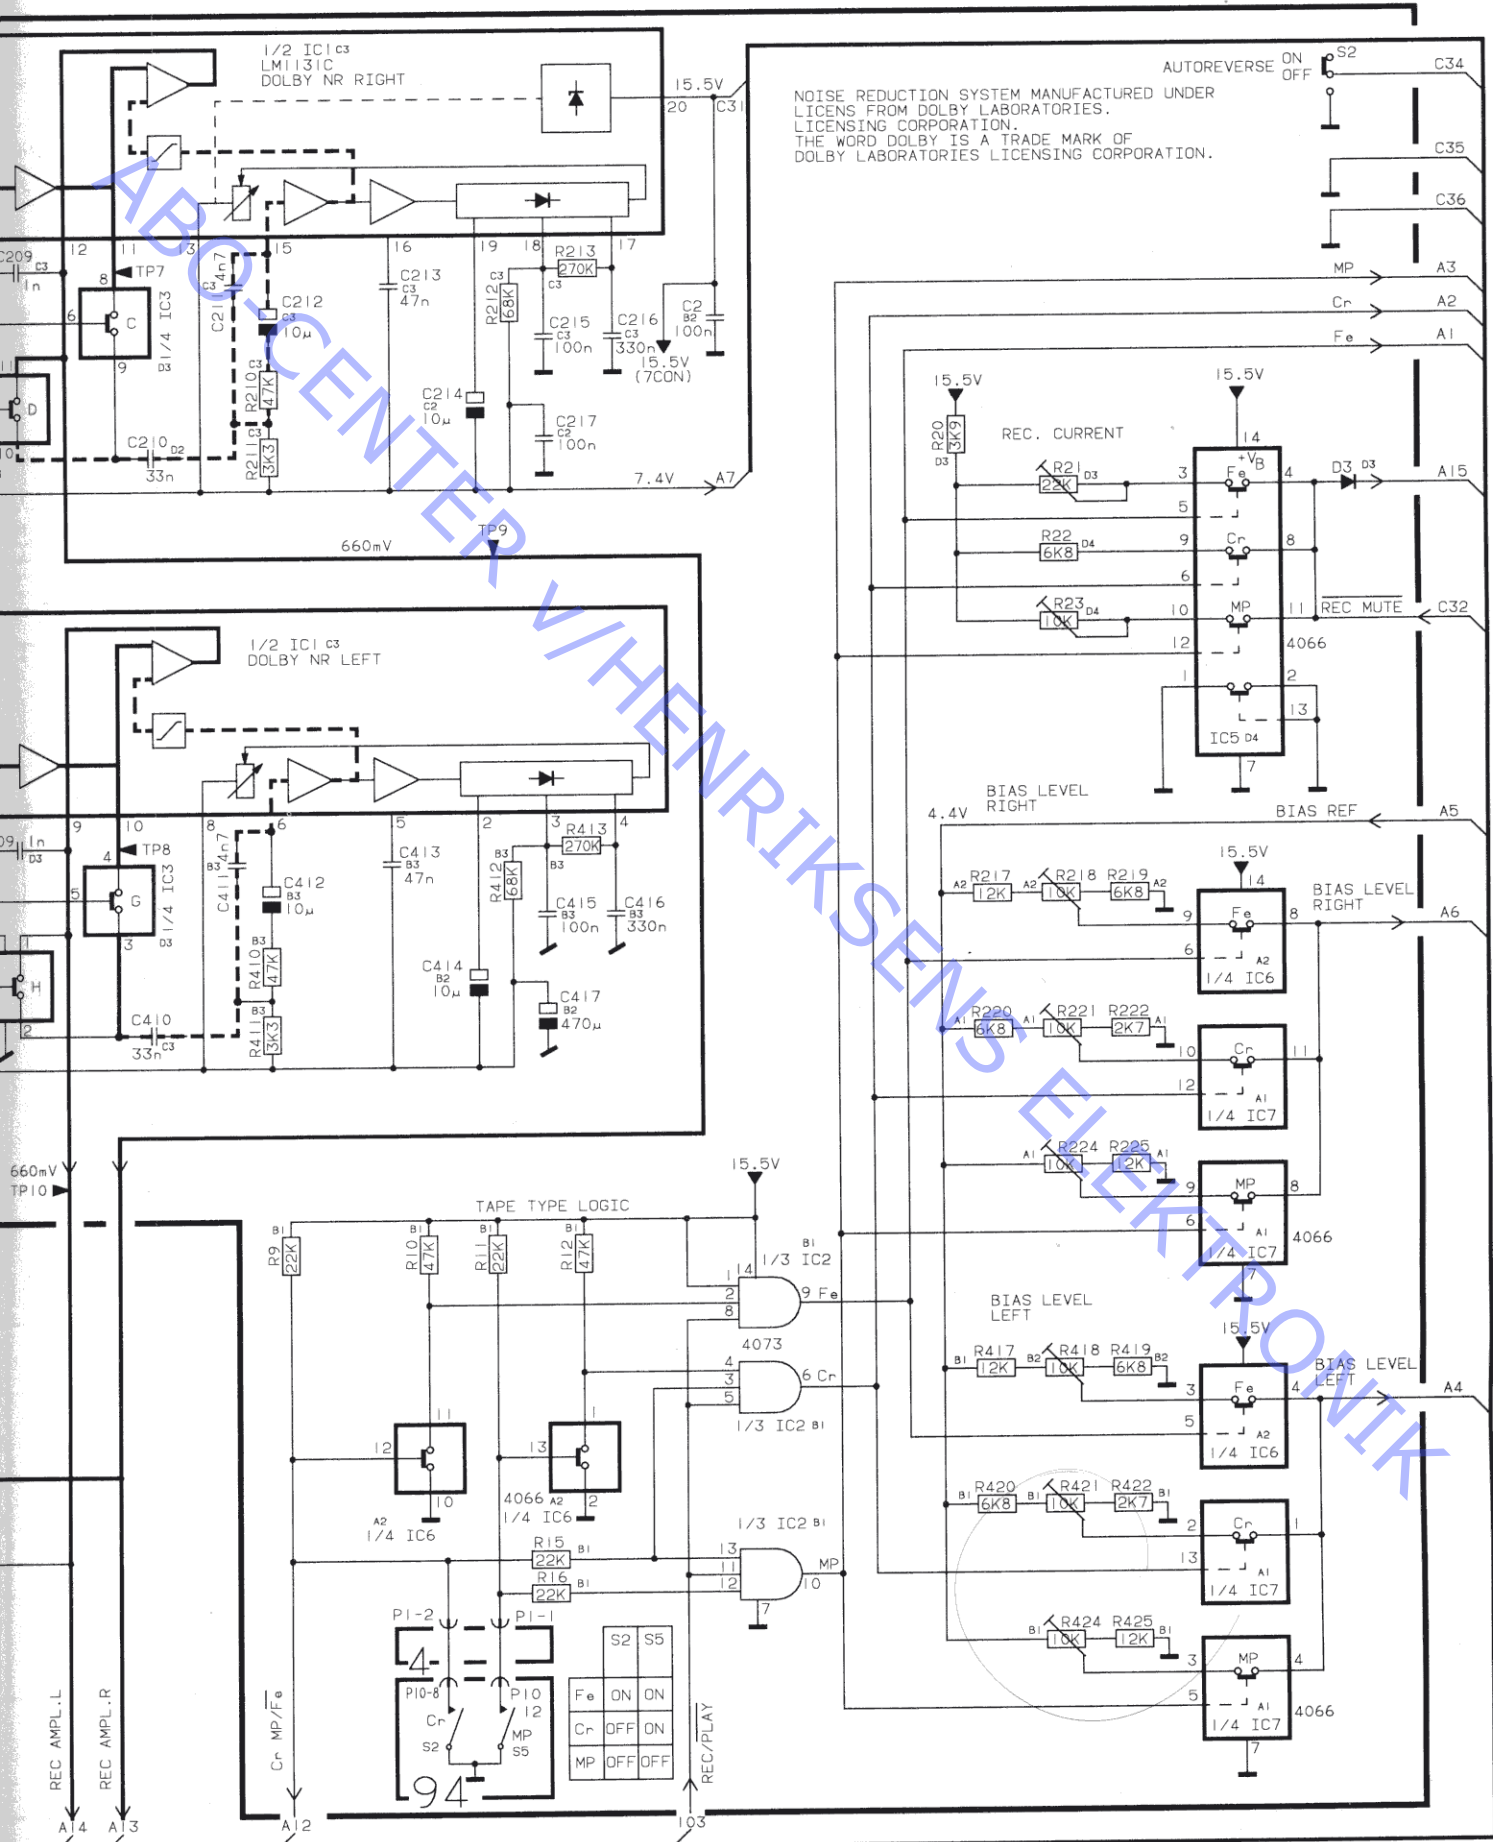


WHENRIKSENS ELETROBOMIK

DIAGRAM C (Control and Operation)

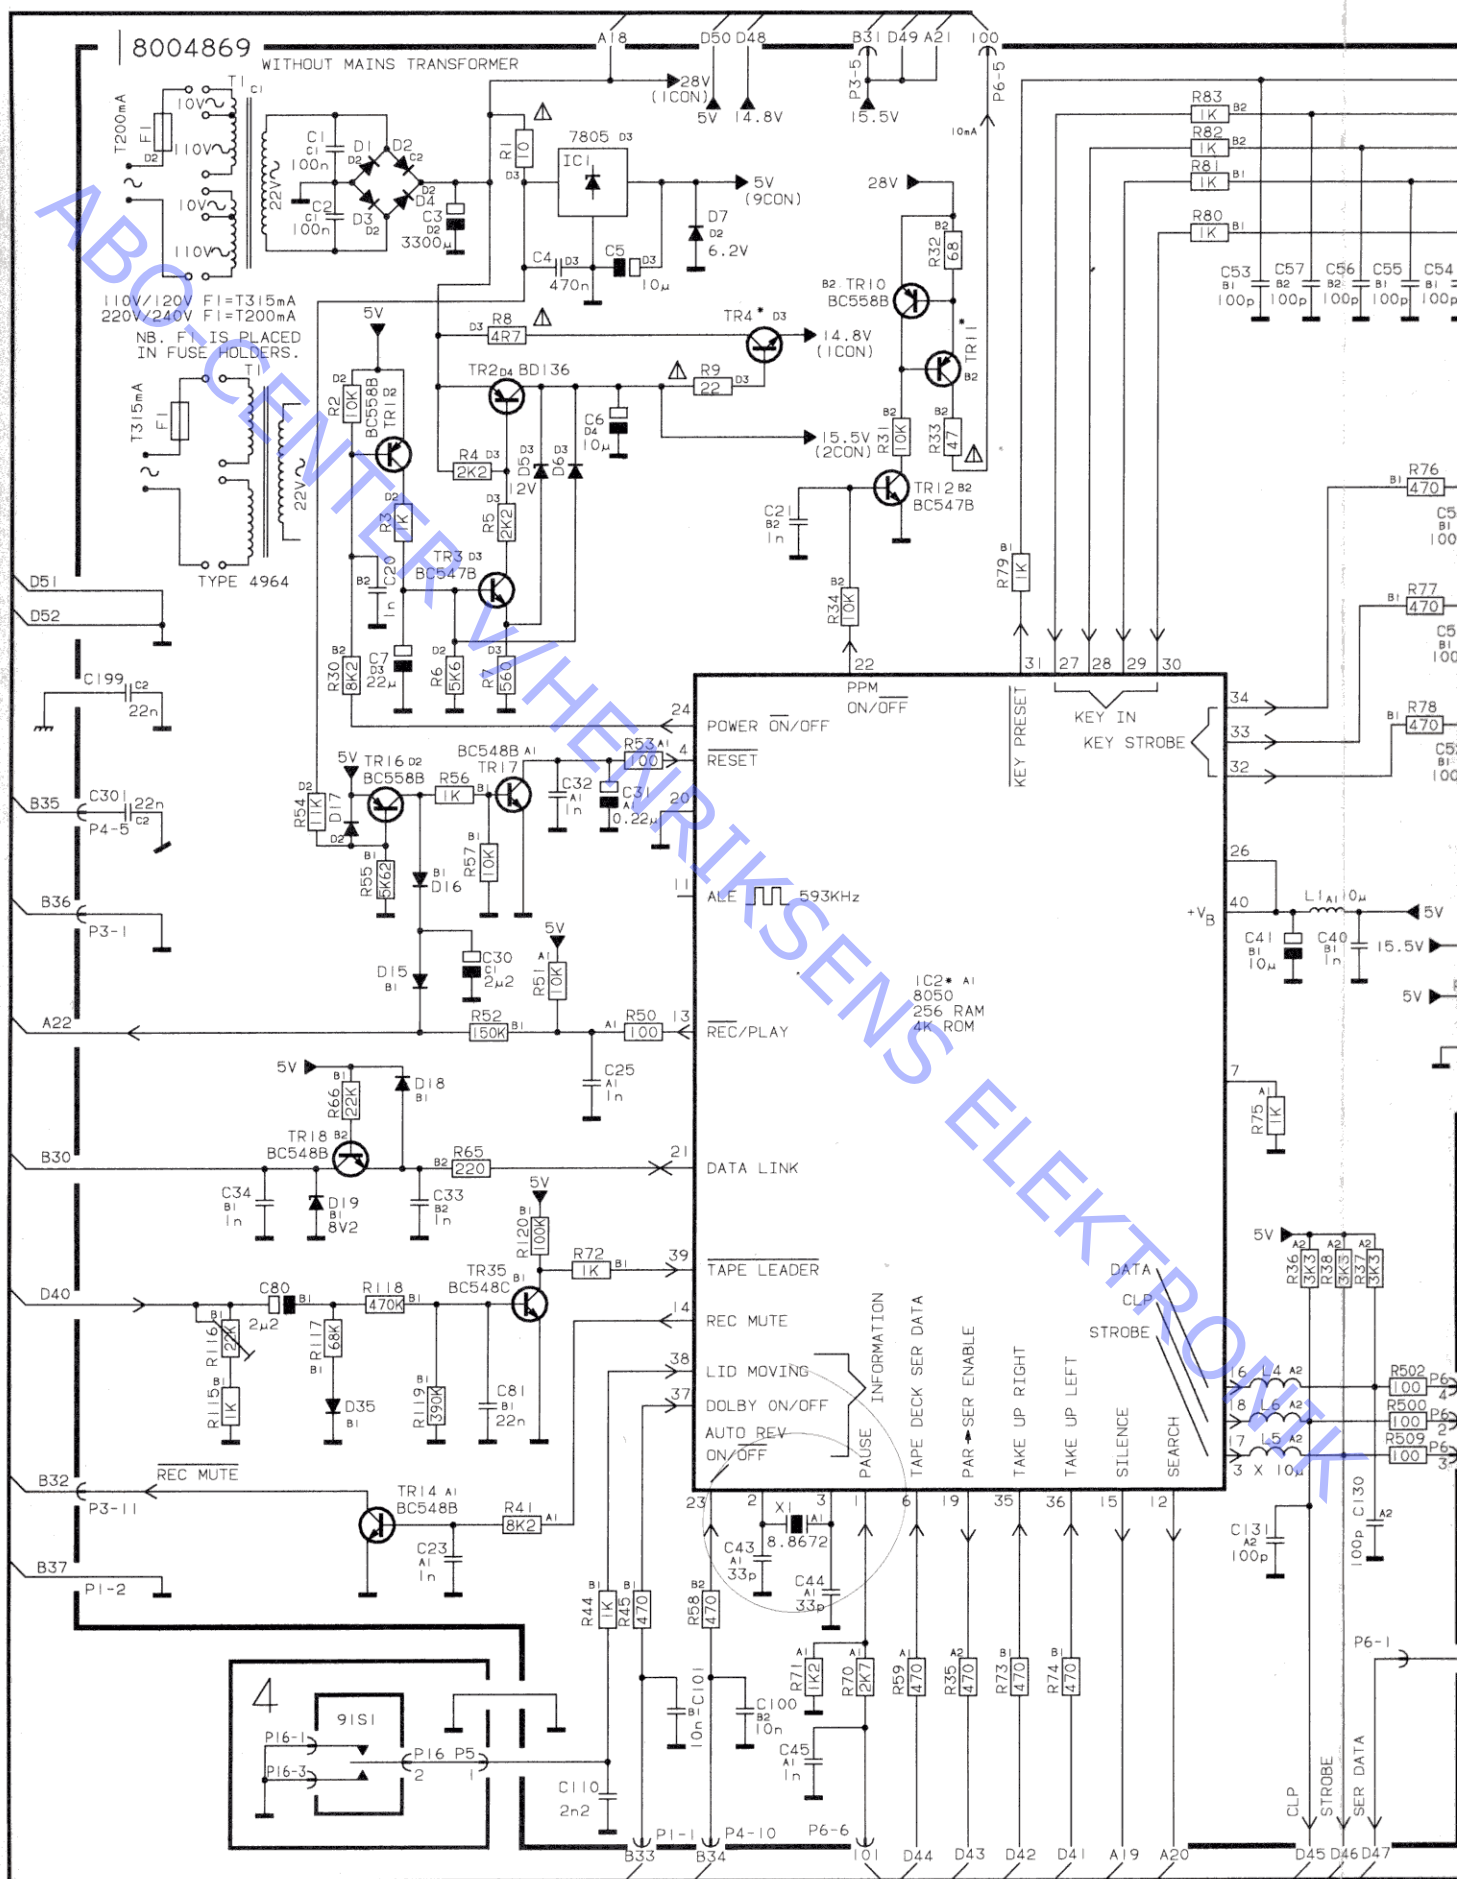

38004782

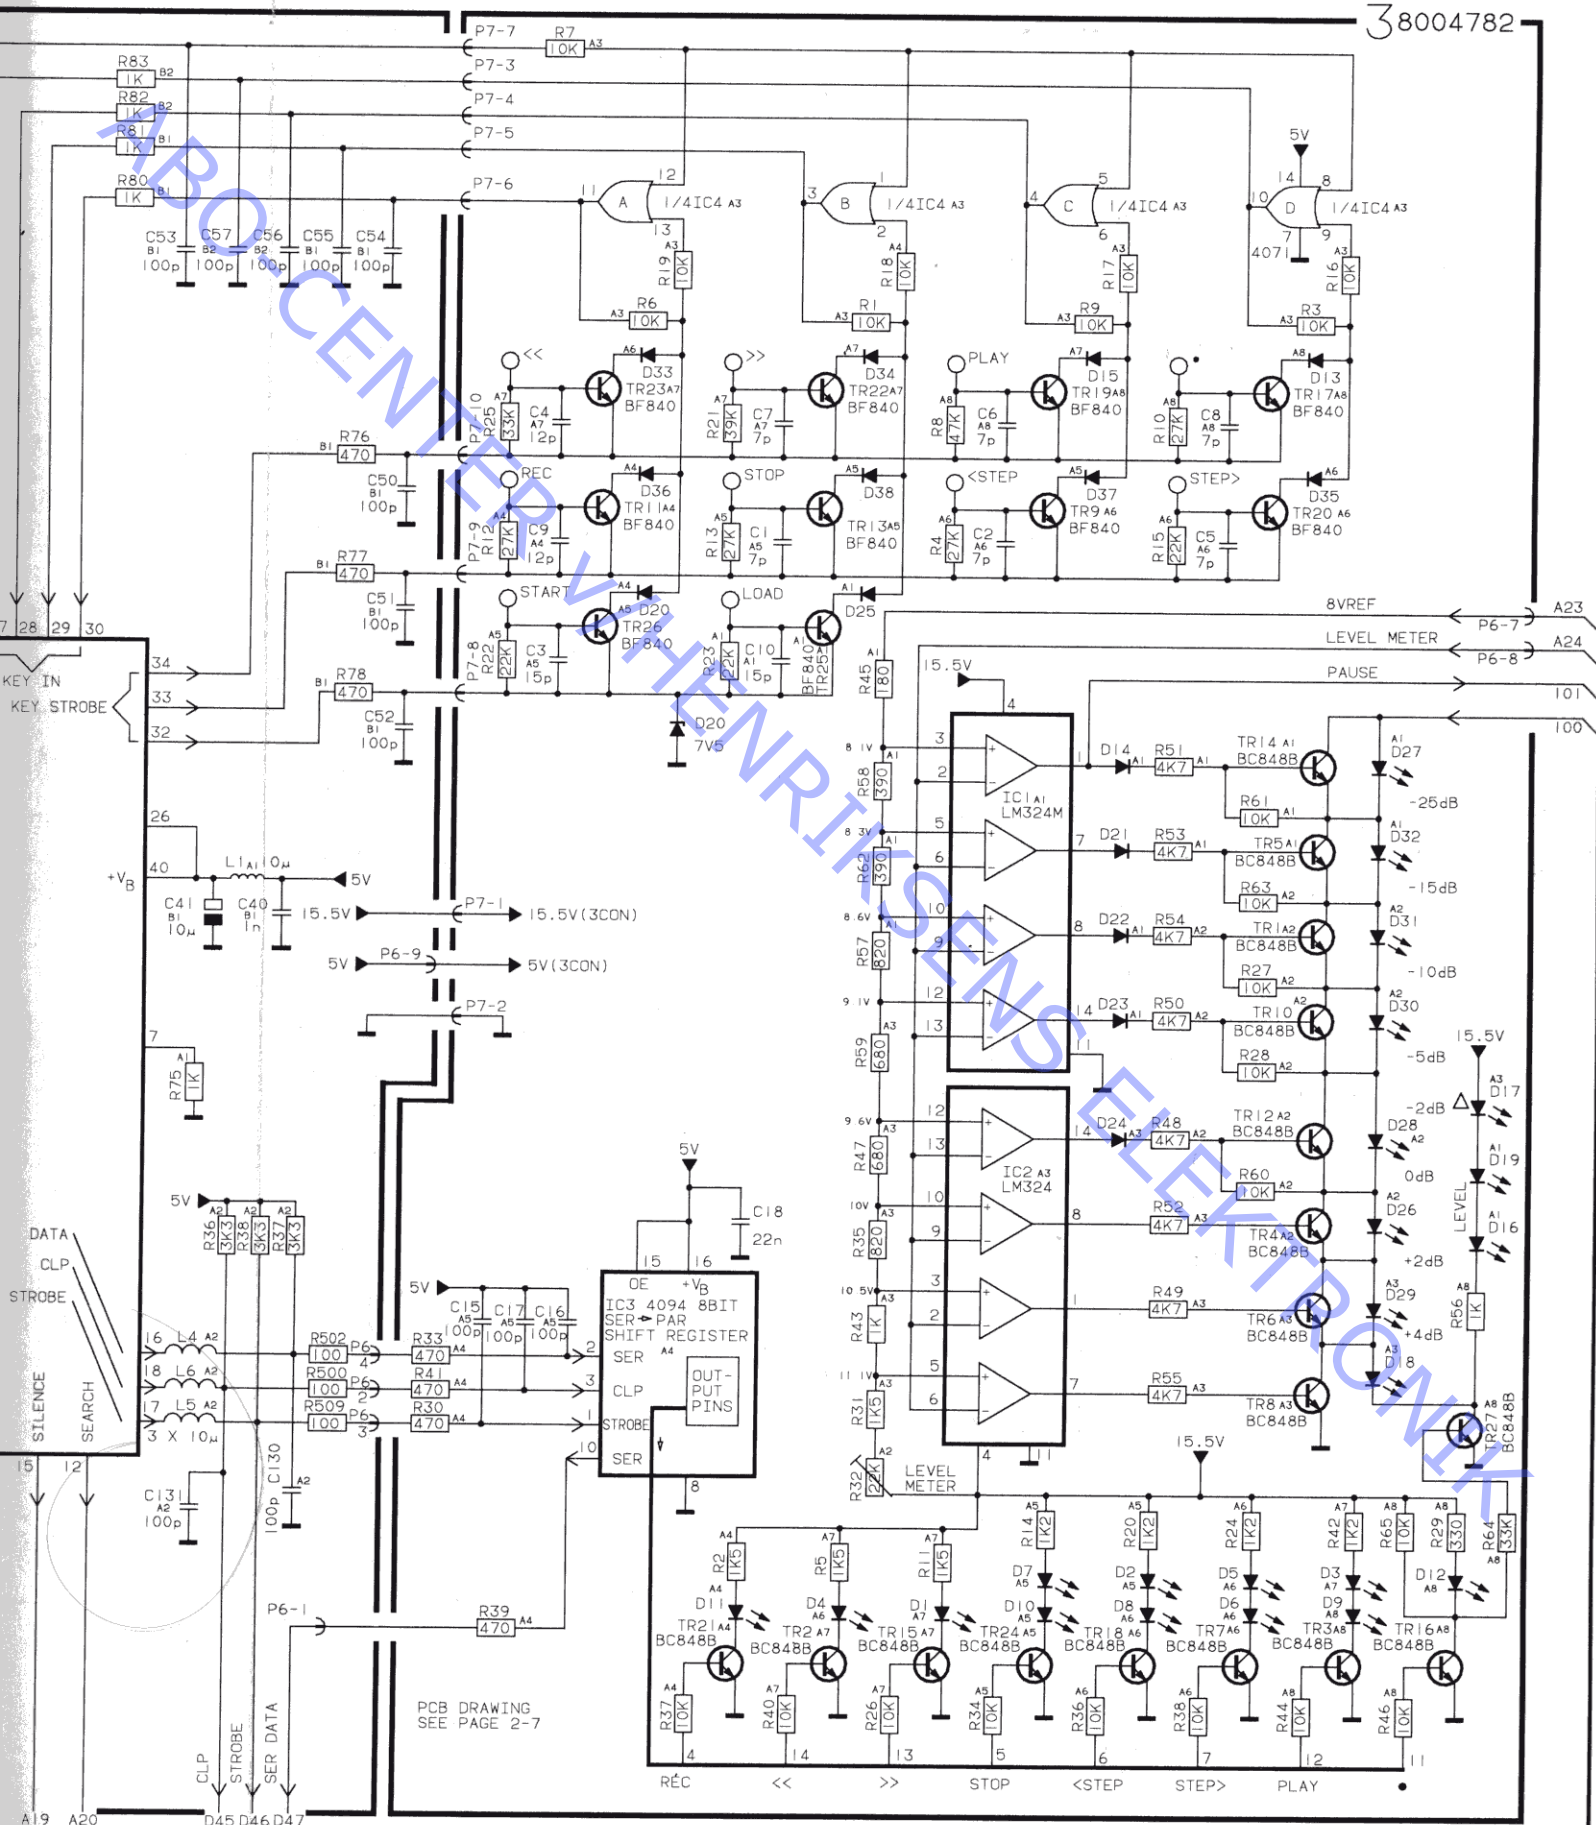

PCB DRAWING
SEE PAGE 2-7

(XCON.)=NUMBER OF VOLTAGE CONNECTIONS.

DIAGRAM C (Tape Deck Control)

