

# B E O L I T 6 0 0




A D A M A N D A G L U F T E R  
P R O D U C T I O N  
L E V E R A D U K T I L D E T K O N S E L I G E D A N N E H O W


- ABO-CENTER VI HENVIKSENDE**
- Håndtaget aftages ved et let tryk i pilen A's retning.
  - Efter aftagning af bundstykket fjernes skruerne m/r. B i begge sider.
  - Sidestykkerne kan nu fjernes ved først at forskyde dem i pilen C's retning og derefter ved et let træk i pilen D's retning.
  - De to kabinetshalvdeler fjernes ved at vippe dem i pilen E's retning.
  - Skalaen fjernes ved demontering af besnittene under de to store knapper. Viseren kan nu vippes op og topsykket fjernes.
  - Topsykket sidder fastspændt på chassiset med 4 skruer. Skruerne er placeret ved enderne af ferritanteren og ved de to tonekontroller.

## Demontering af modtageren.

- Take off handle by pressing lightly in the direction of the arrow A.
- Take off the bottom piece and thereafter remove the screws marked B (at both sides).
- Remove the side members by sliding them in the direction of the arrow C and thereafter pulling lightly in the direction of the arrow D.
- Remove the two halves of the cabinet by tipping them in the direction of the arrow E.
- The scale can be removed by means of dismantling the bushings under the two big buttons. Now you can bob up the pointer and remove the top section.
- The top section is held to the chassis by four screws near the ends of the ferrite antenna and the two tone controls.

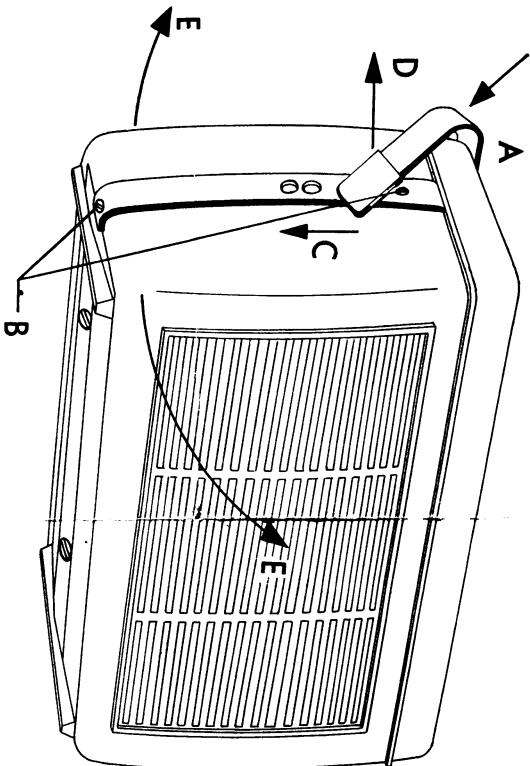

**Placeringsstegning  
Drawing showing  
the placing**

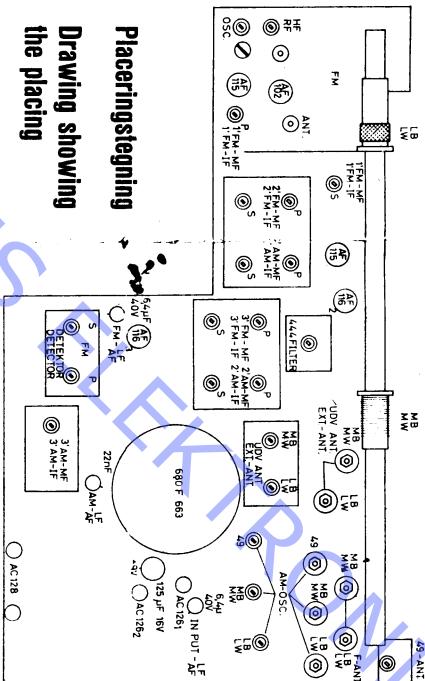

## Disassembling the Receiver.

- Take off handle by pressing lightly in the direction of the arrow A.
- Take off the bottom piece and thereafter remove the screws marked B (at both sides).
- Remove the side members by sliding them in the direction of the arrow C and thereafter pulling lightly in the direction of the arrow D.
- Remove the two halves of the cabinet by tipping them in the direction of the arrow E.
- The scale can be removed by means of dismantling the bushings under the two big buttons. Now you can bob up the pointer and remove the top section.
- The top section is held to the chassis by four screws near the ends of the ferrite antenna and the two tone controls.