

Bang & Olufsen

Beosat LM

NEW VERSION
Type 3002

Beosat LM

New version
Type 3002

inuktebes i servicemanualingen Beosat LM (3538747)
Paste into service manual Beosat LM (3538747)
In Serviceanleitung Beosat LM (3538762)
A colle le Manuel d'entretien pour Beosat LM (3538762)


3538784

04-91



GRAM P TUNER, IF, POWER SUPPLY, ODU CONTROL

20 TUNER, IF, POWER SUPPLY

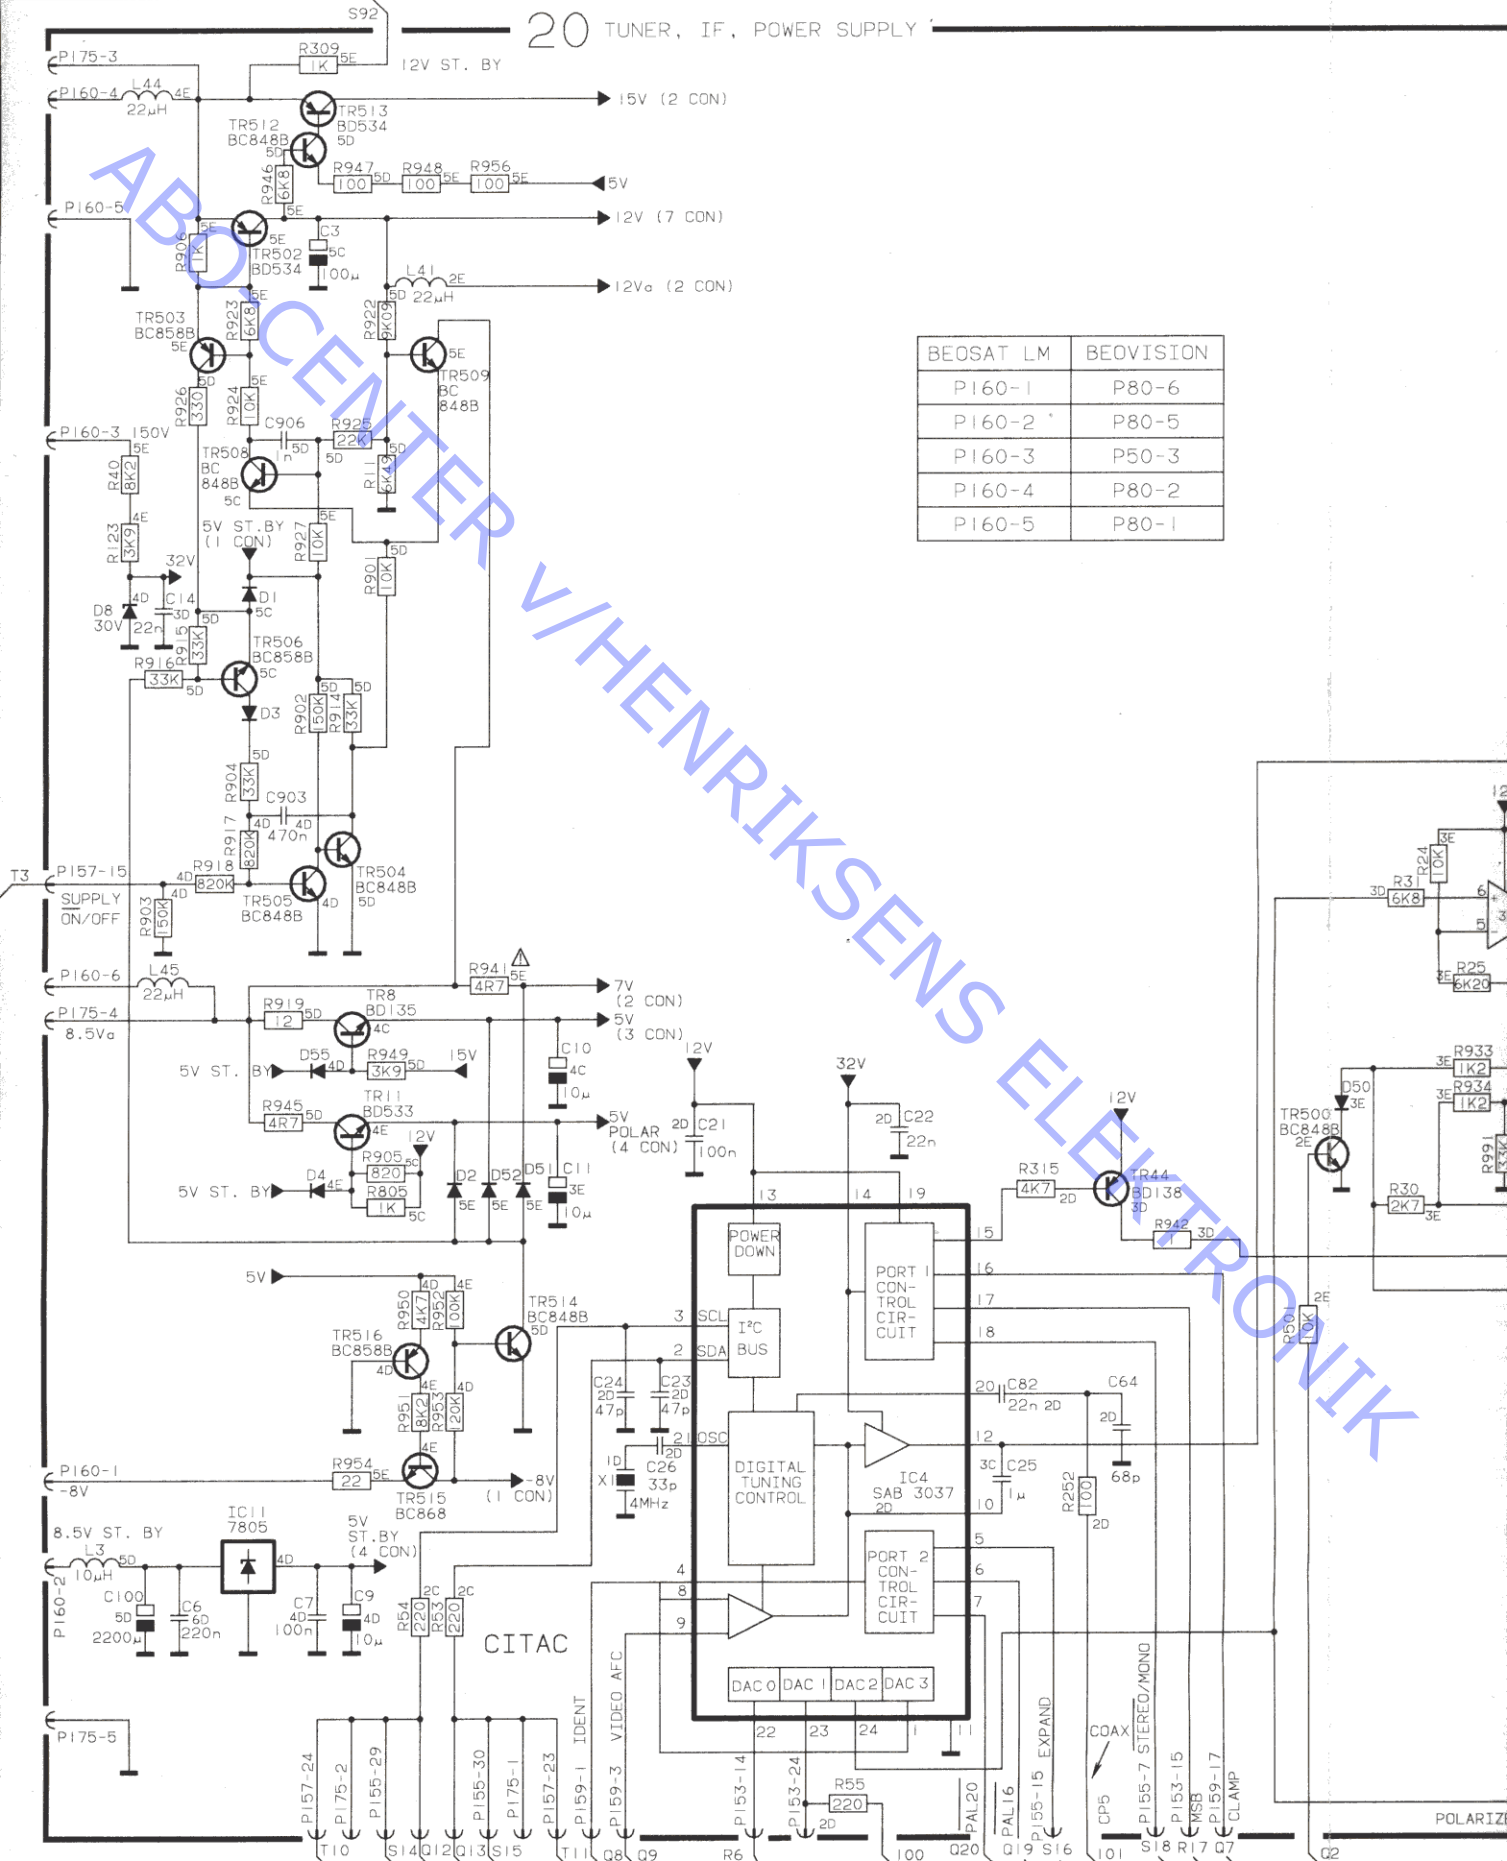

BEOSAT LM	BEOVISION
PI60-1	P80-6
PI60-2	P80-5
PI60-3	P50-3
PI60-4	P80-2
PI60-5	P80-1

AB CENTER V/HENRIKSENS ELEKTRONIK

ABO-CENTER
TELEKOMUNIKASI
ELEKTRONIK

BEOVISION	
P80-6	
P80-5	
P50-3	
P80-2	
P80-1	

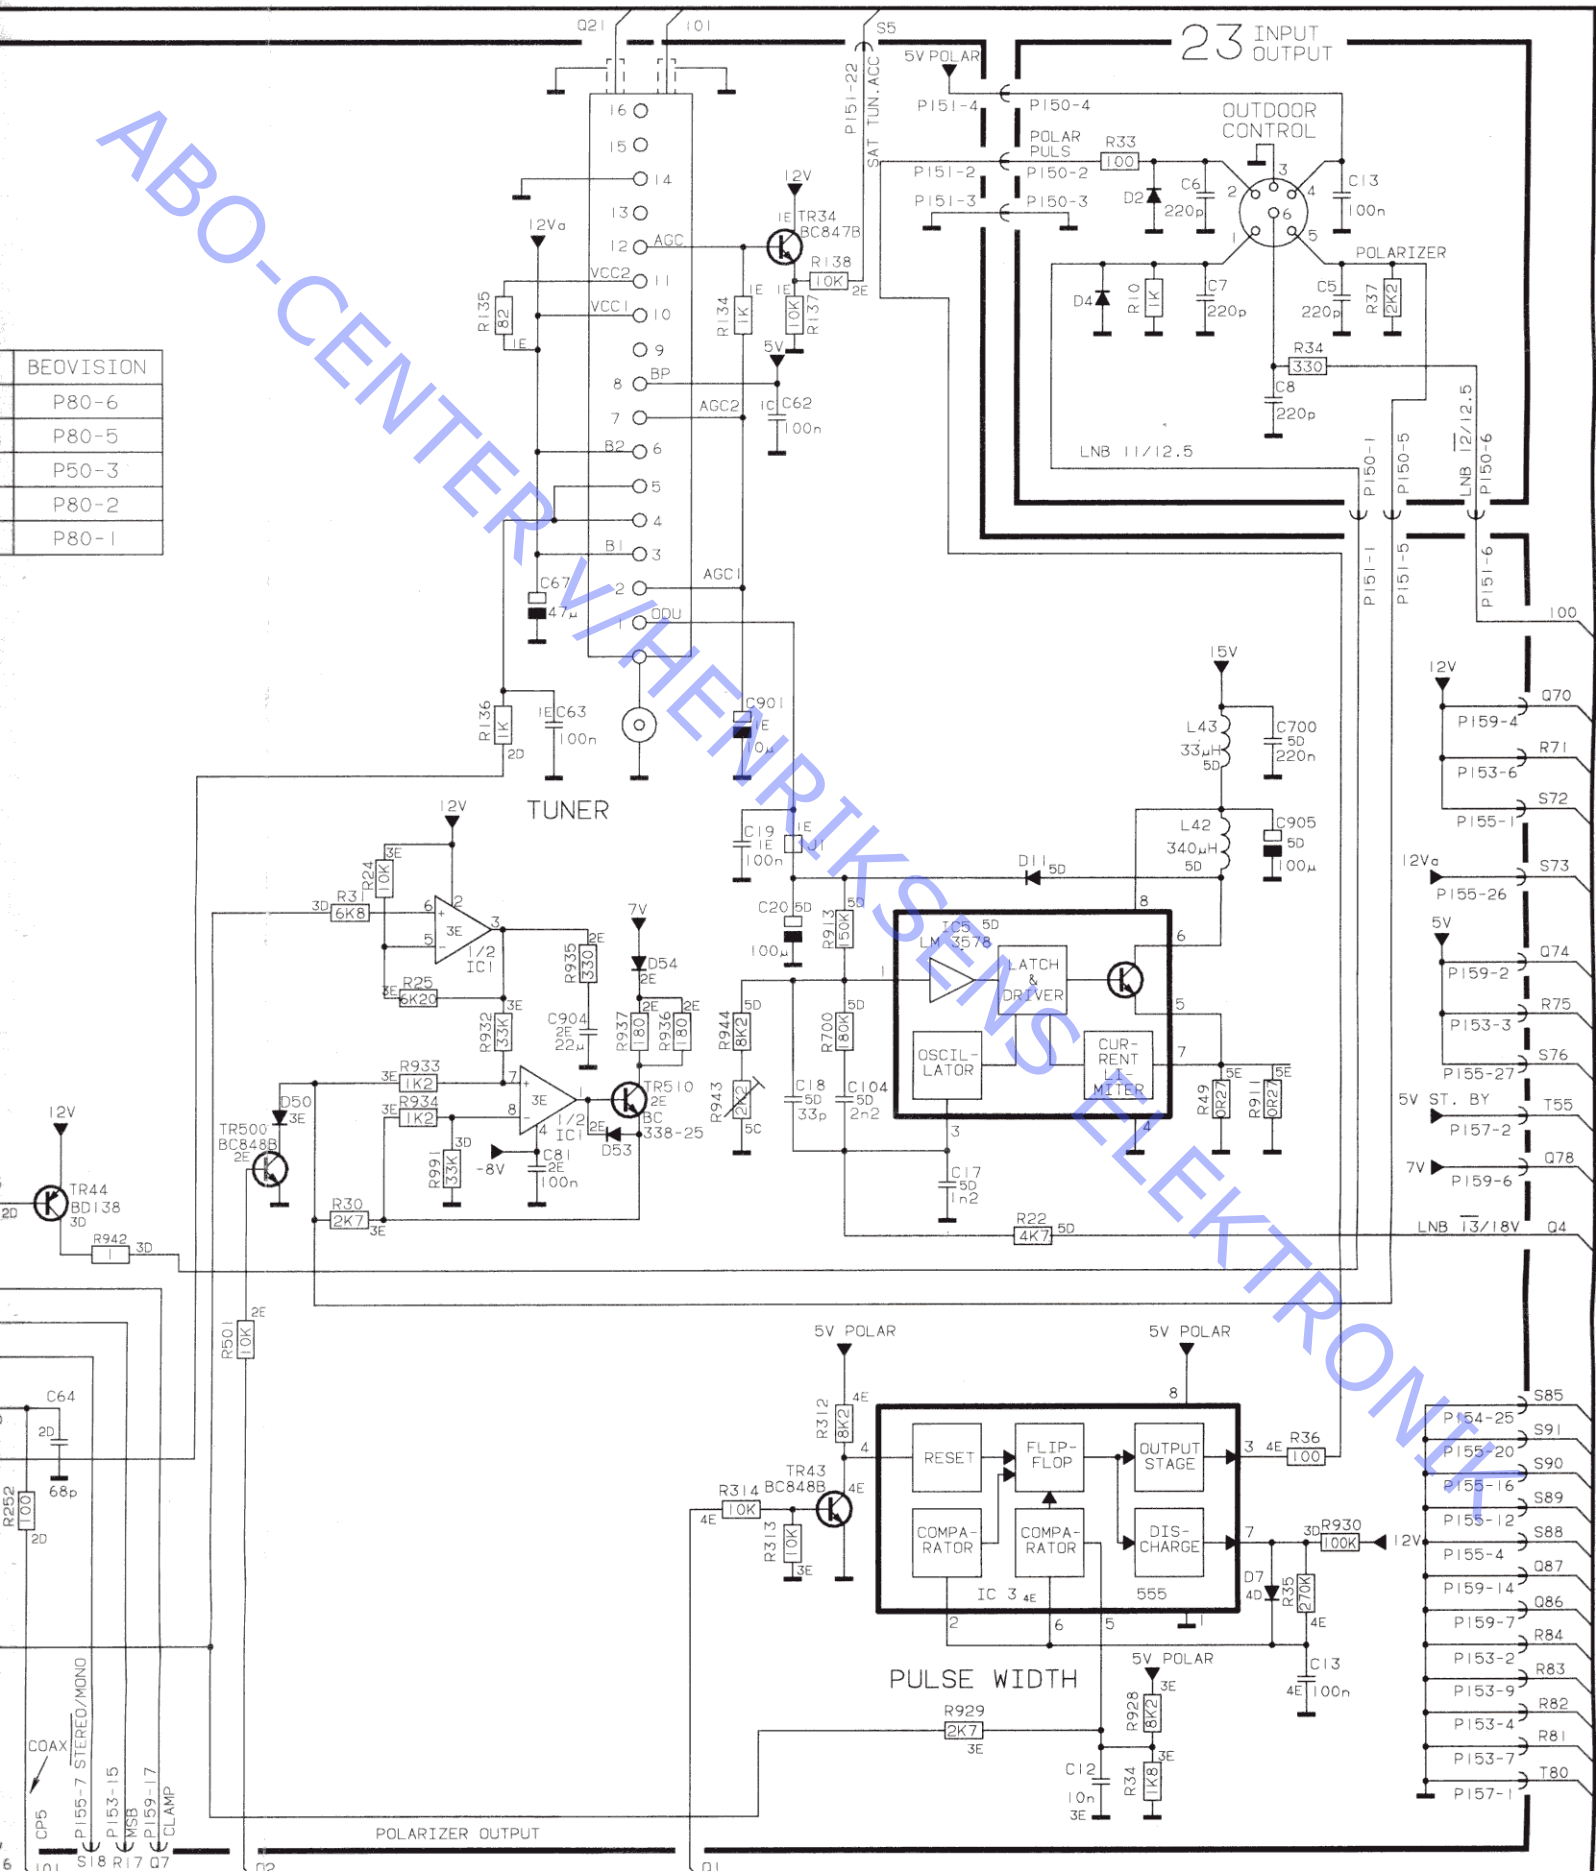
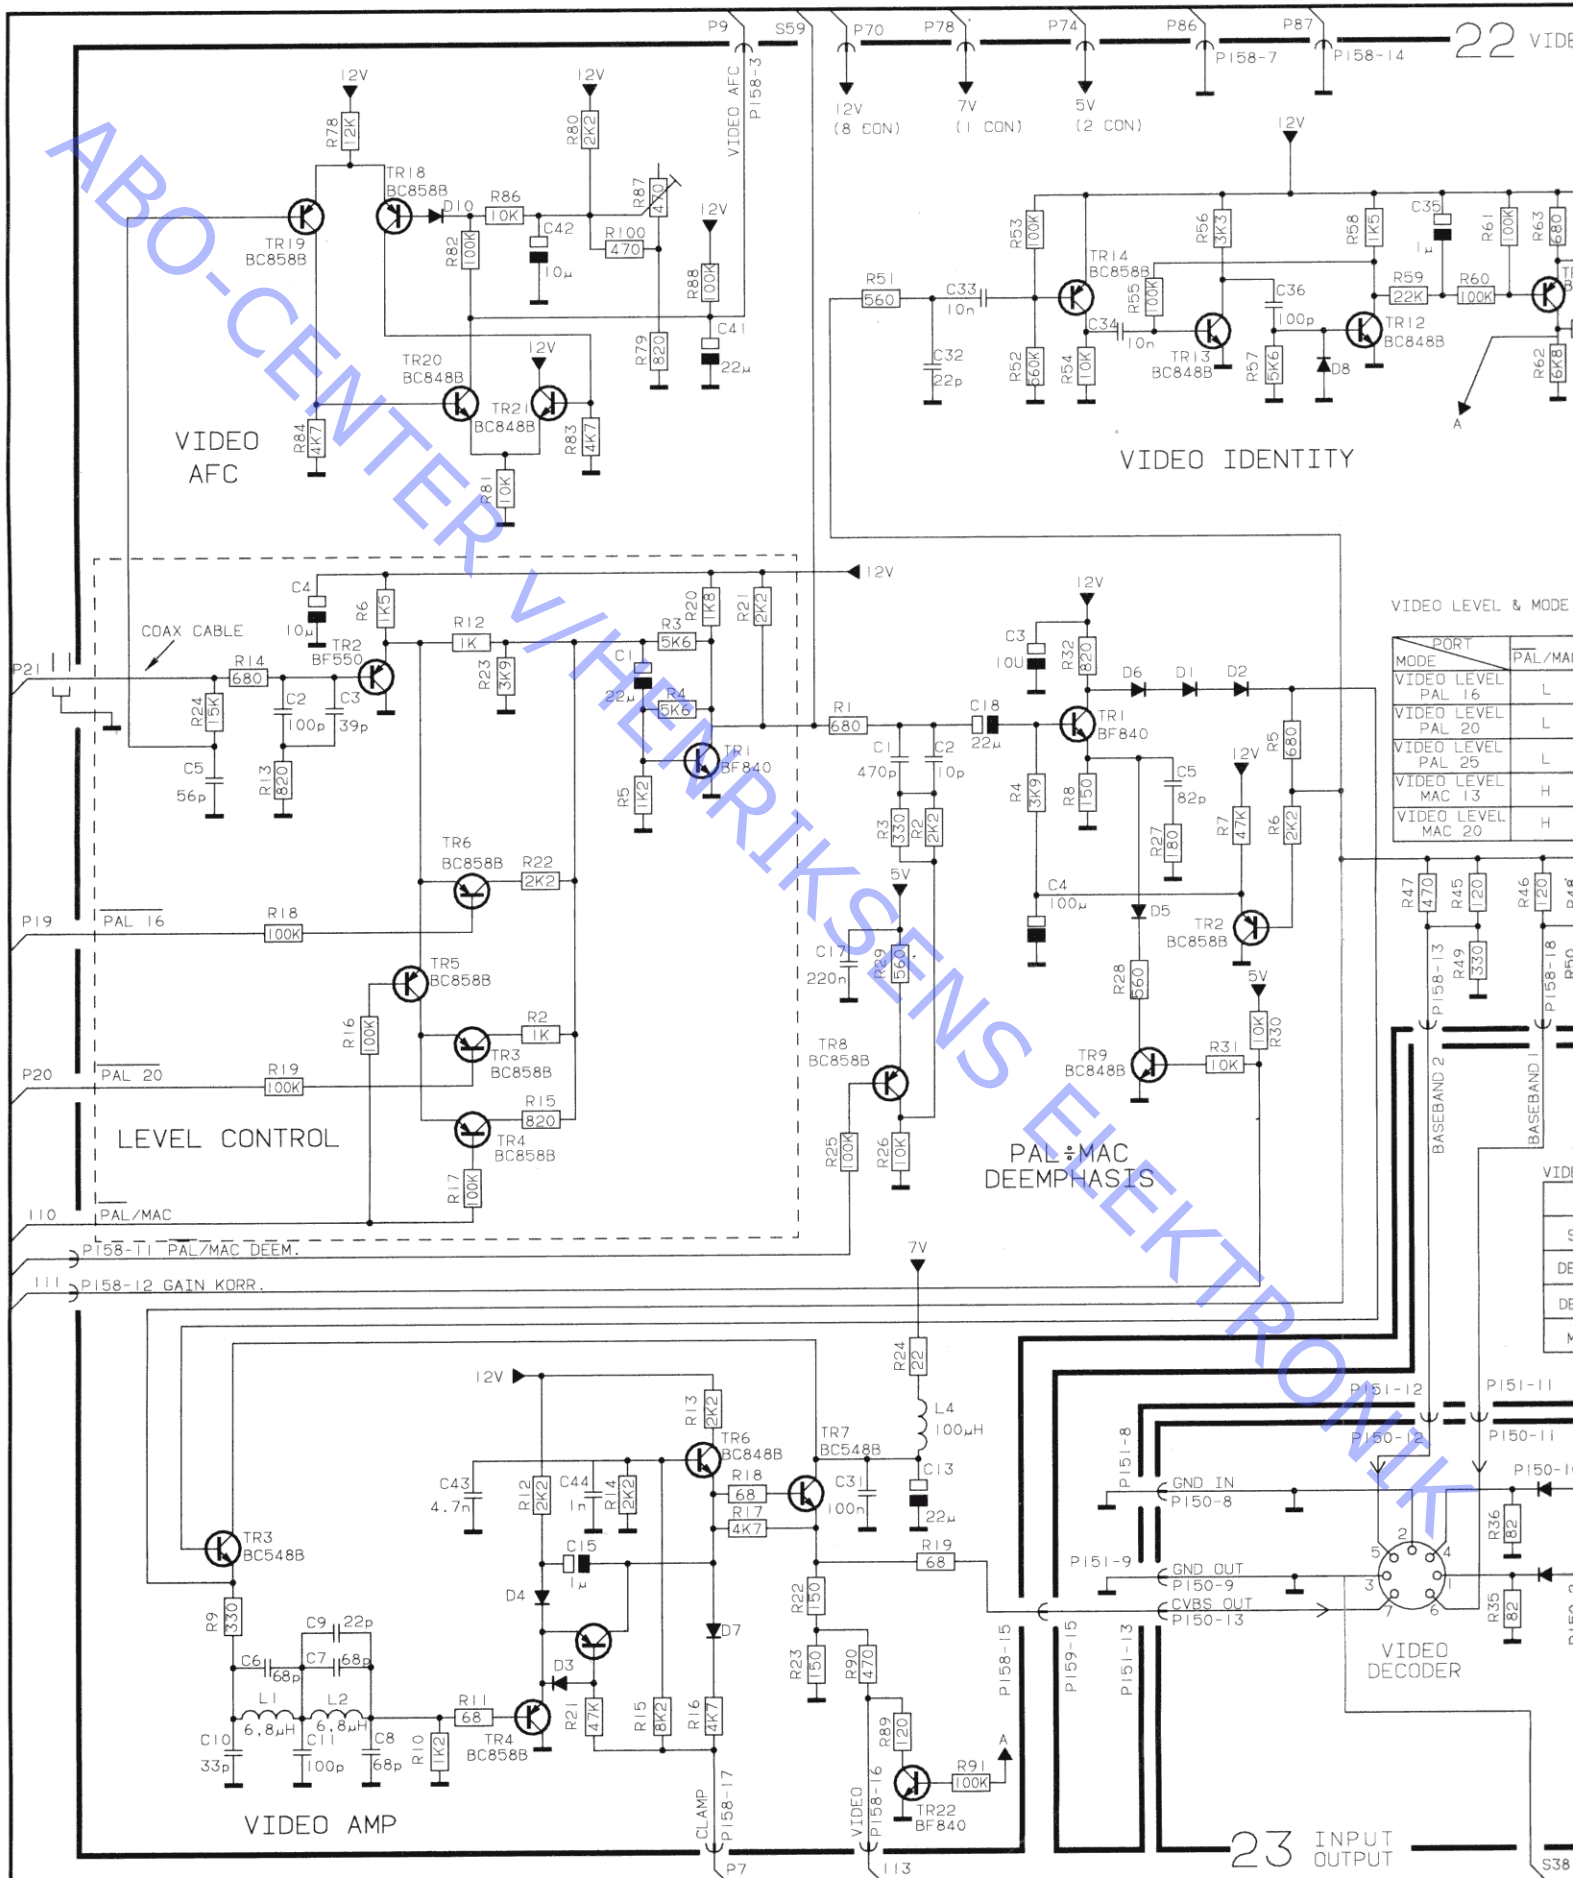


DIAGRAM Q VIDEO AMPL, VIDEO SWITCH, PORT EXPANDER



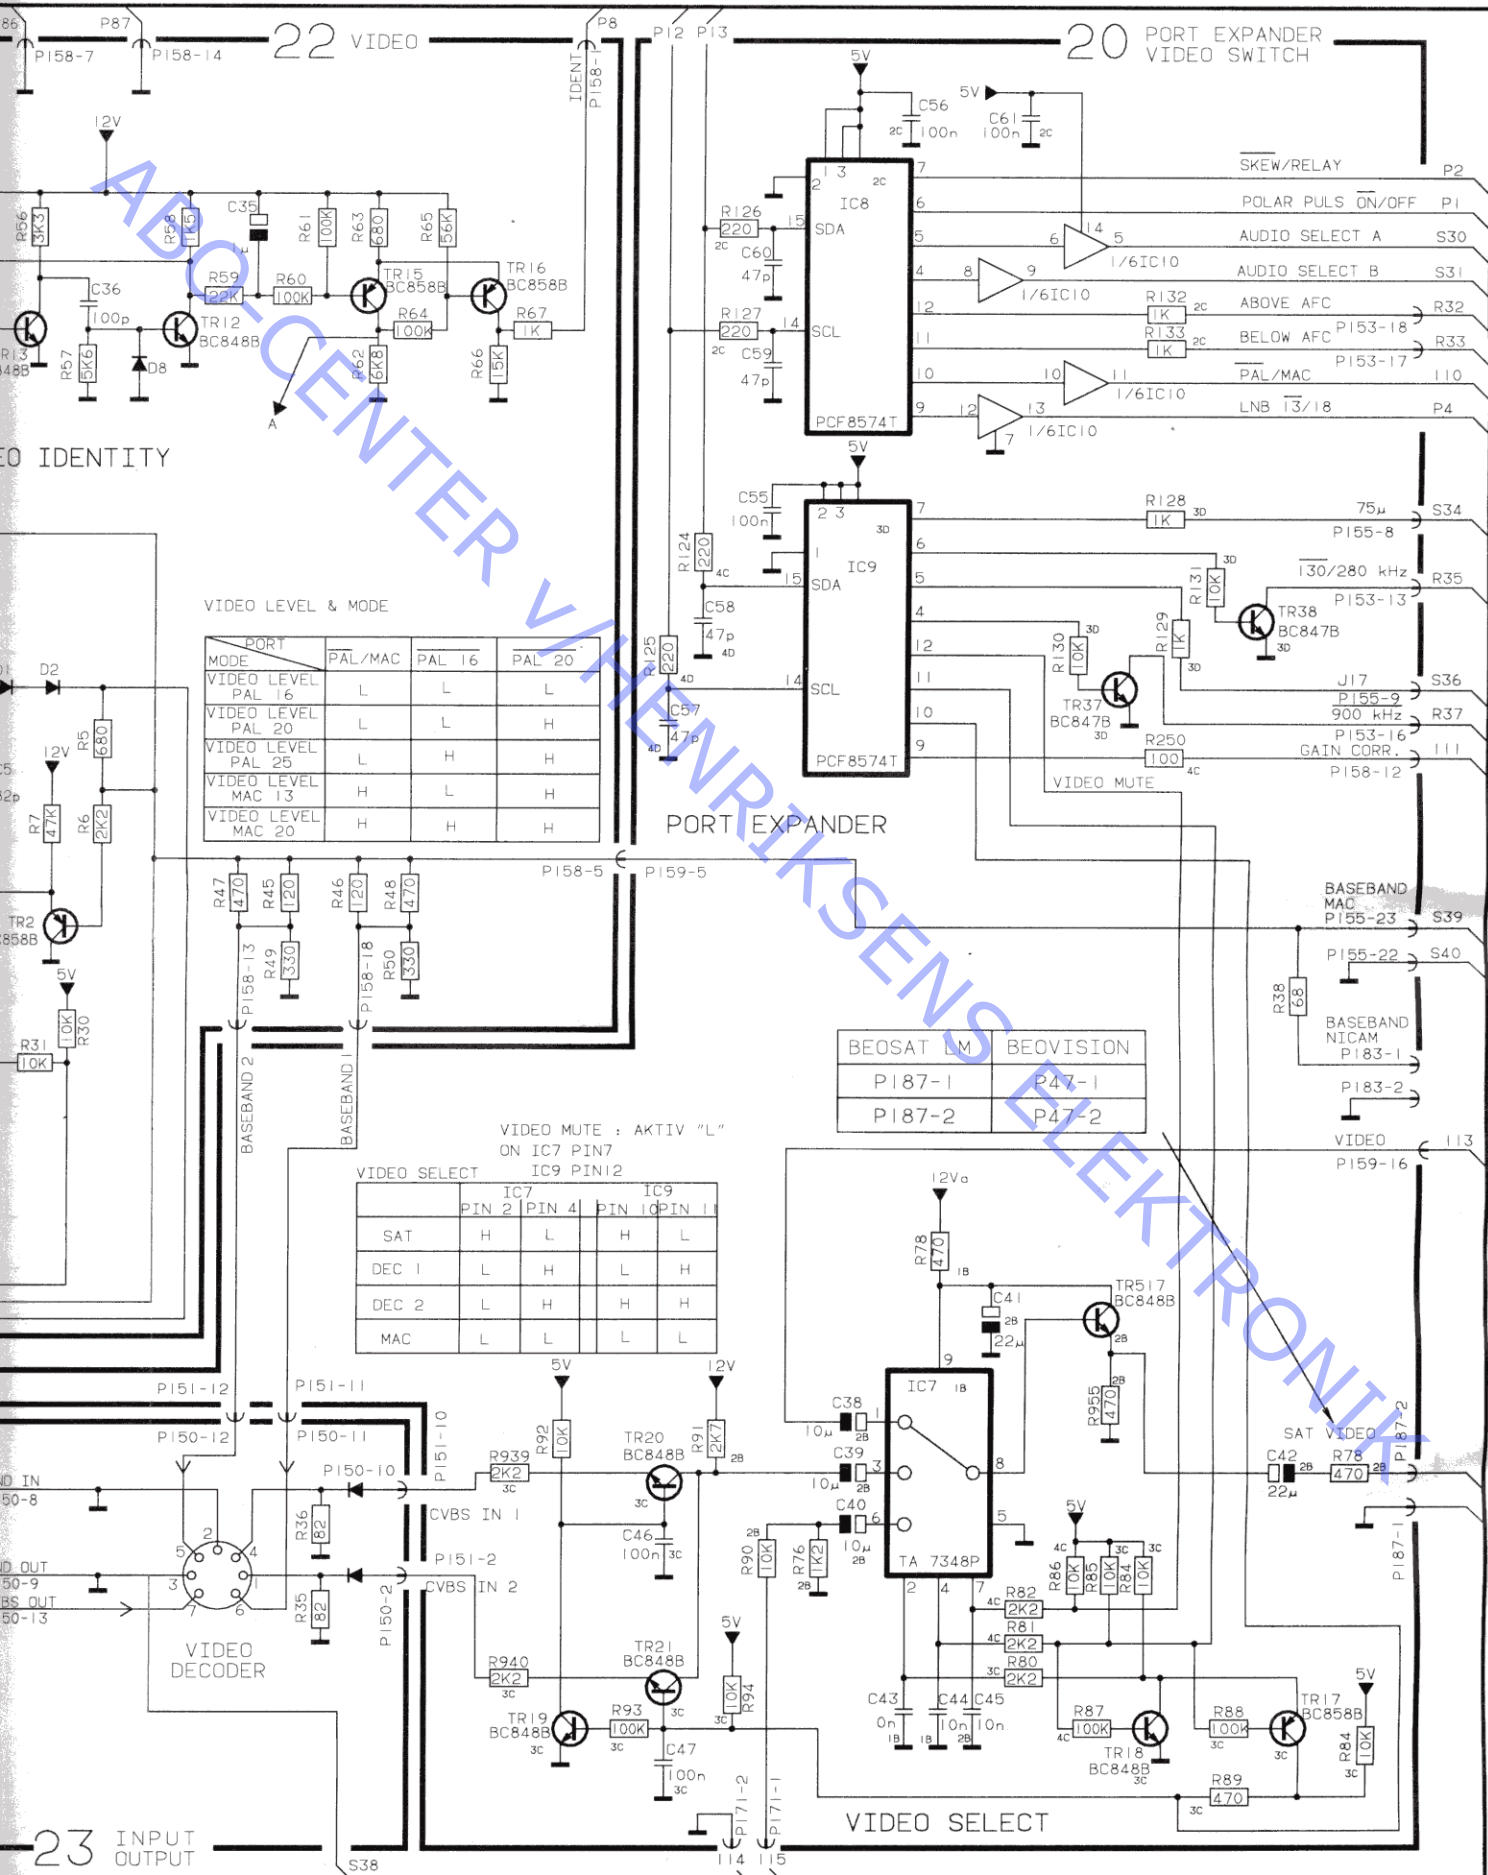
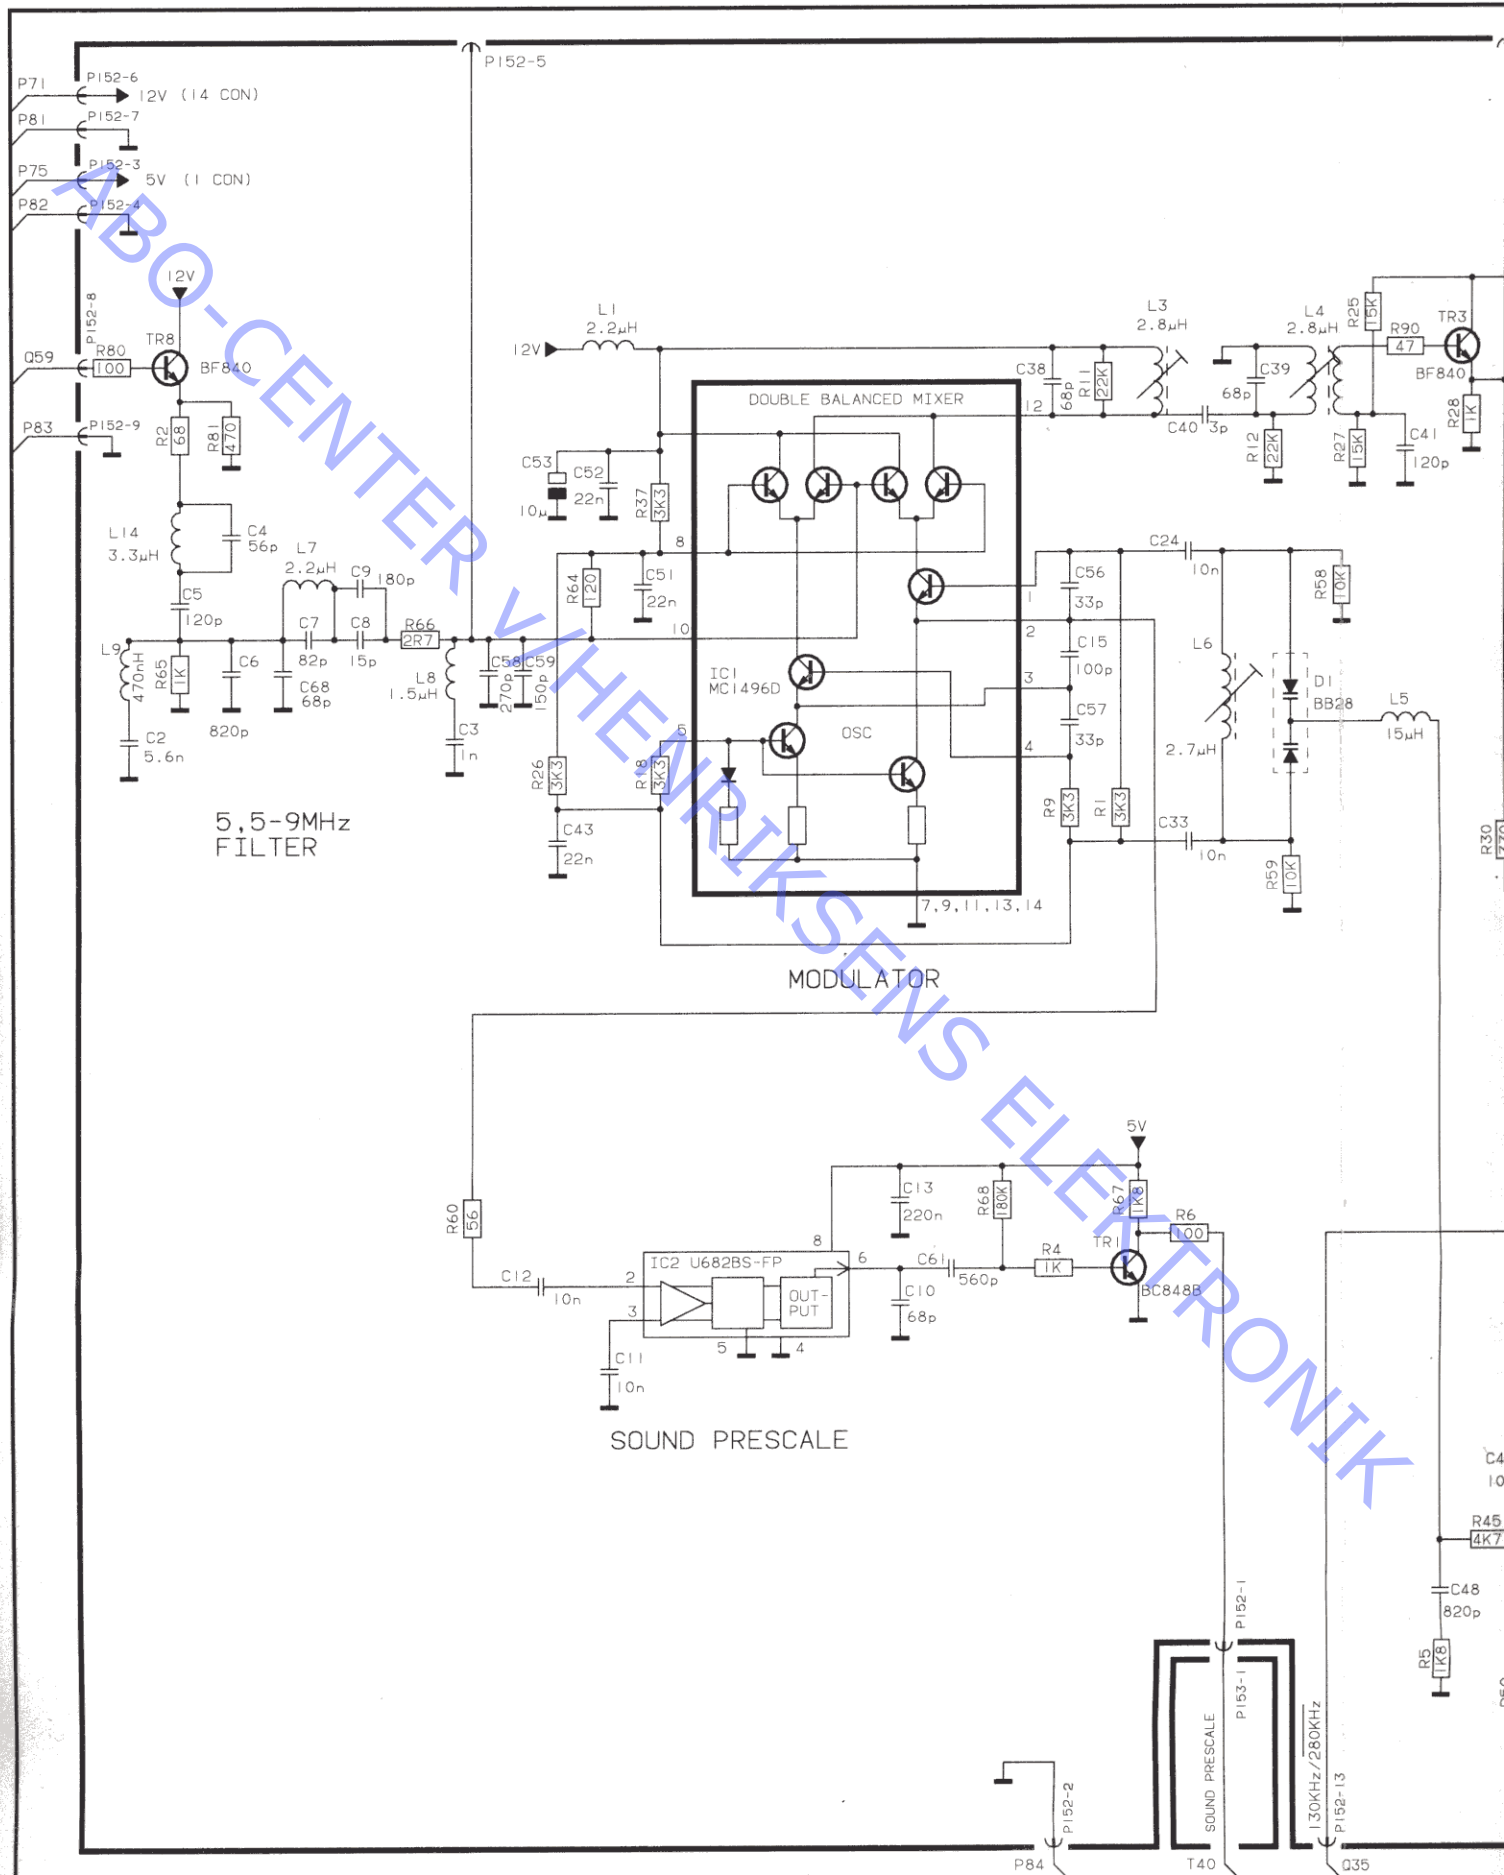


DIAGRAM R SOUND IF, SOUND DETECTOR







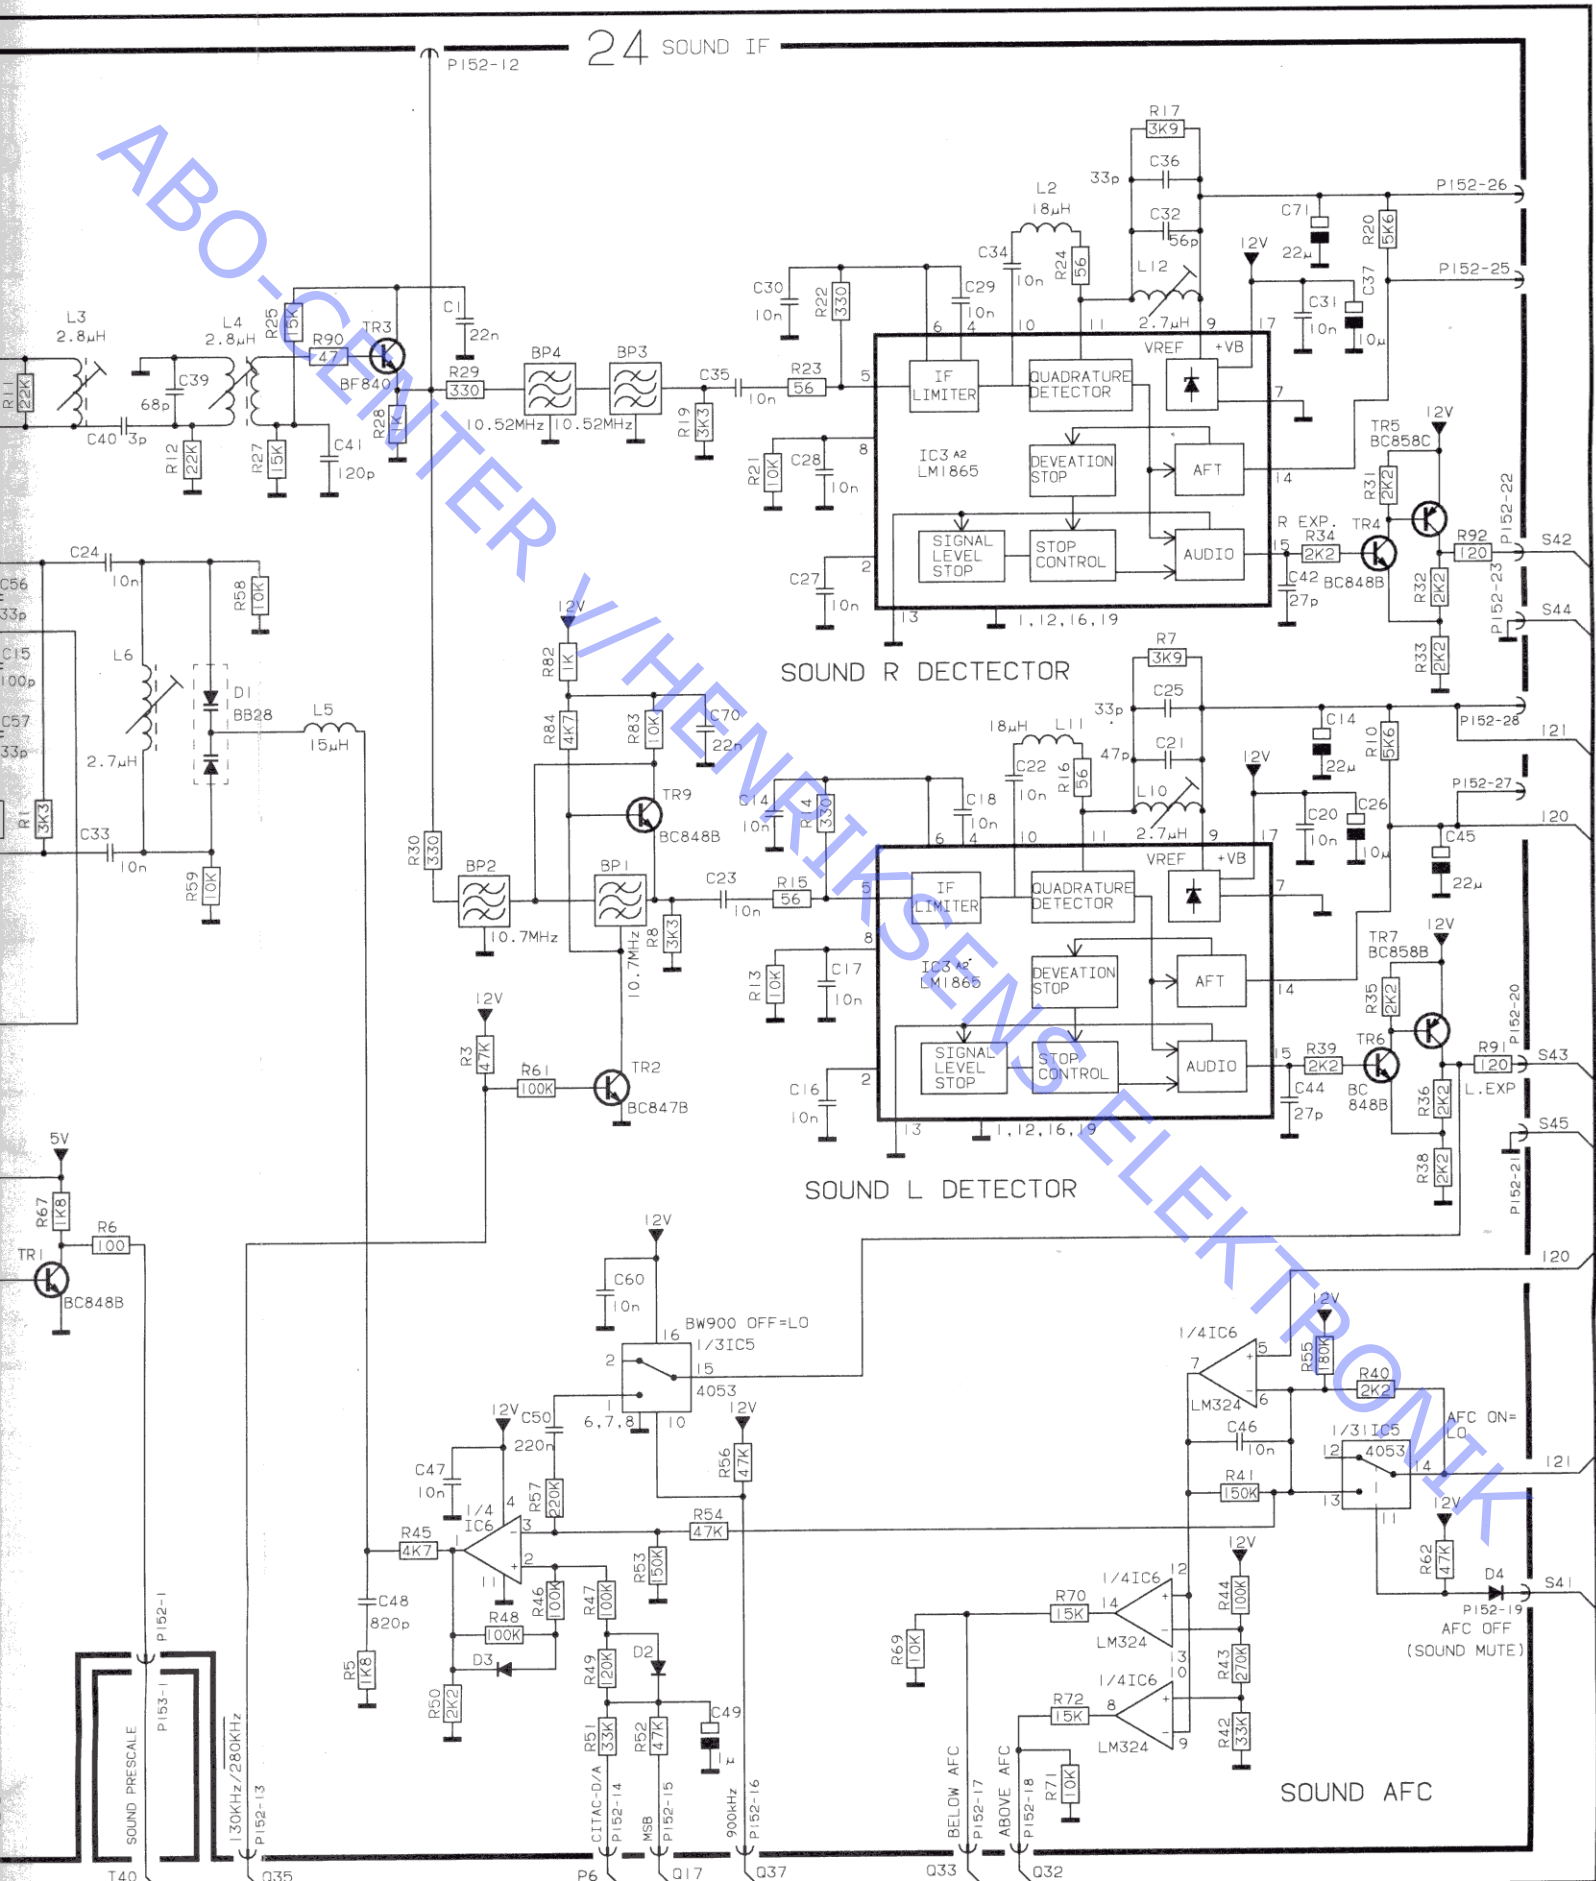


DIAGRAM S SOUND EXPAND, AUDIO SWITCH

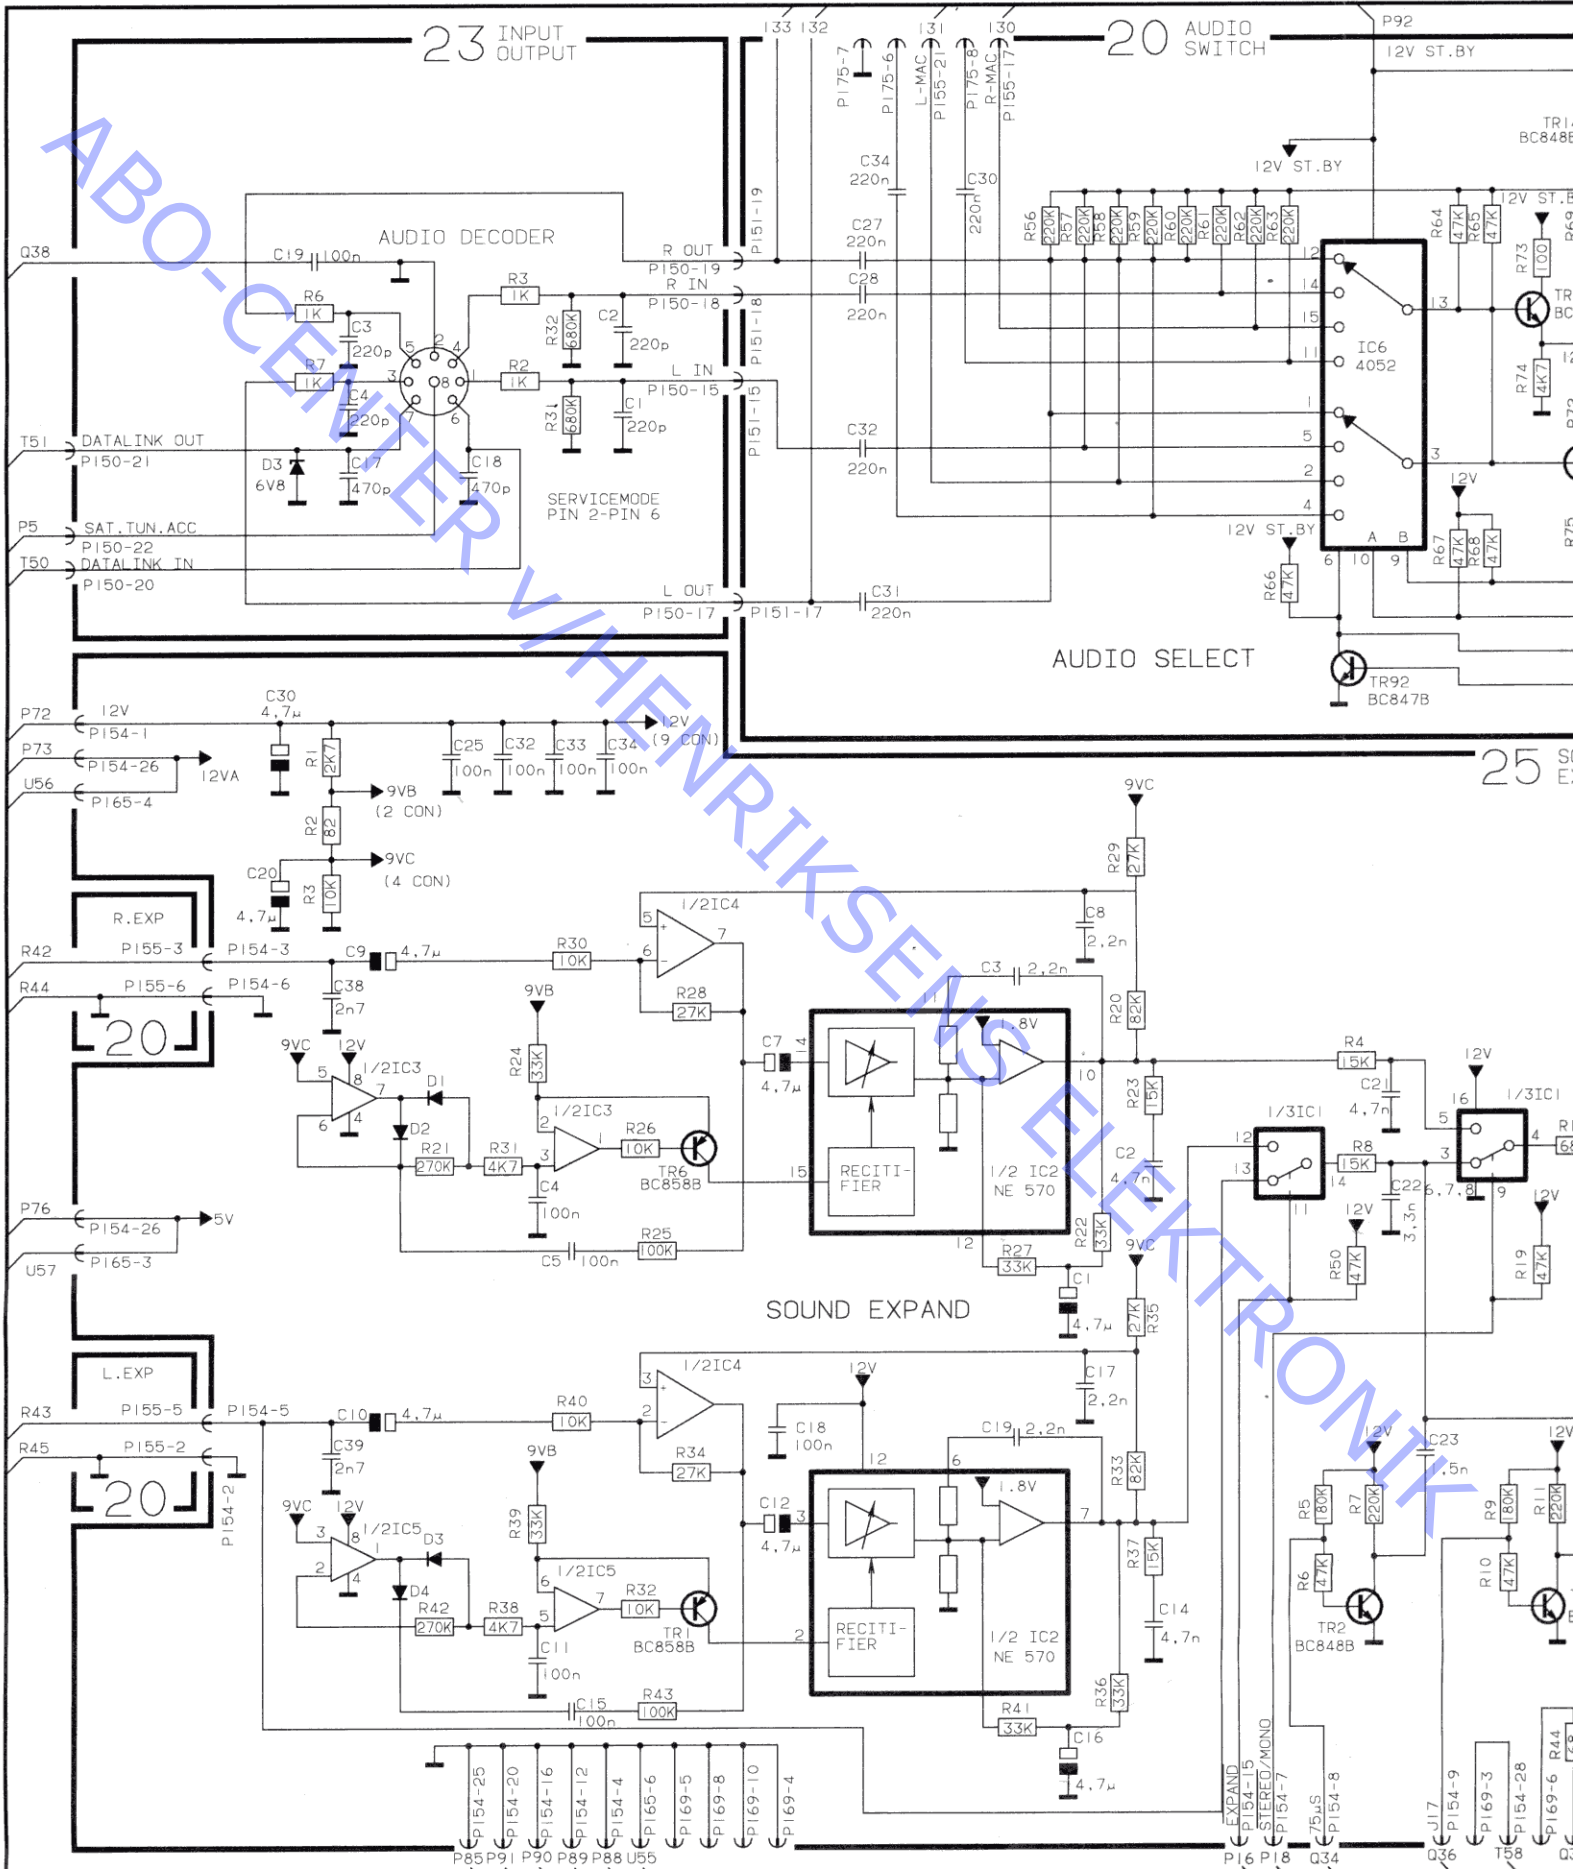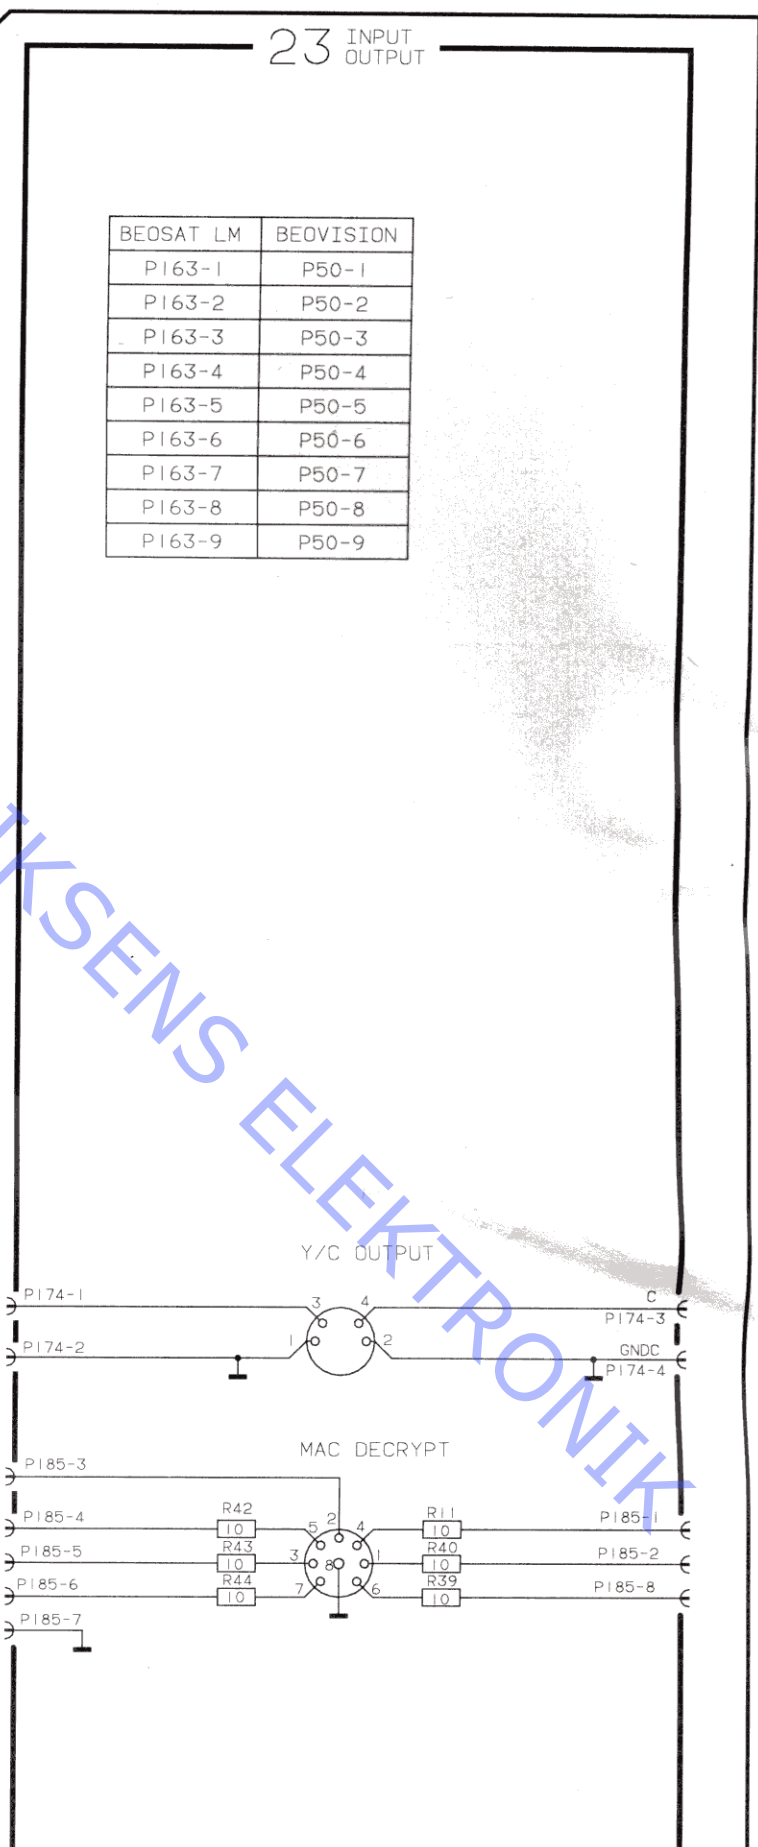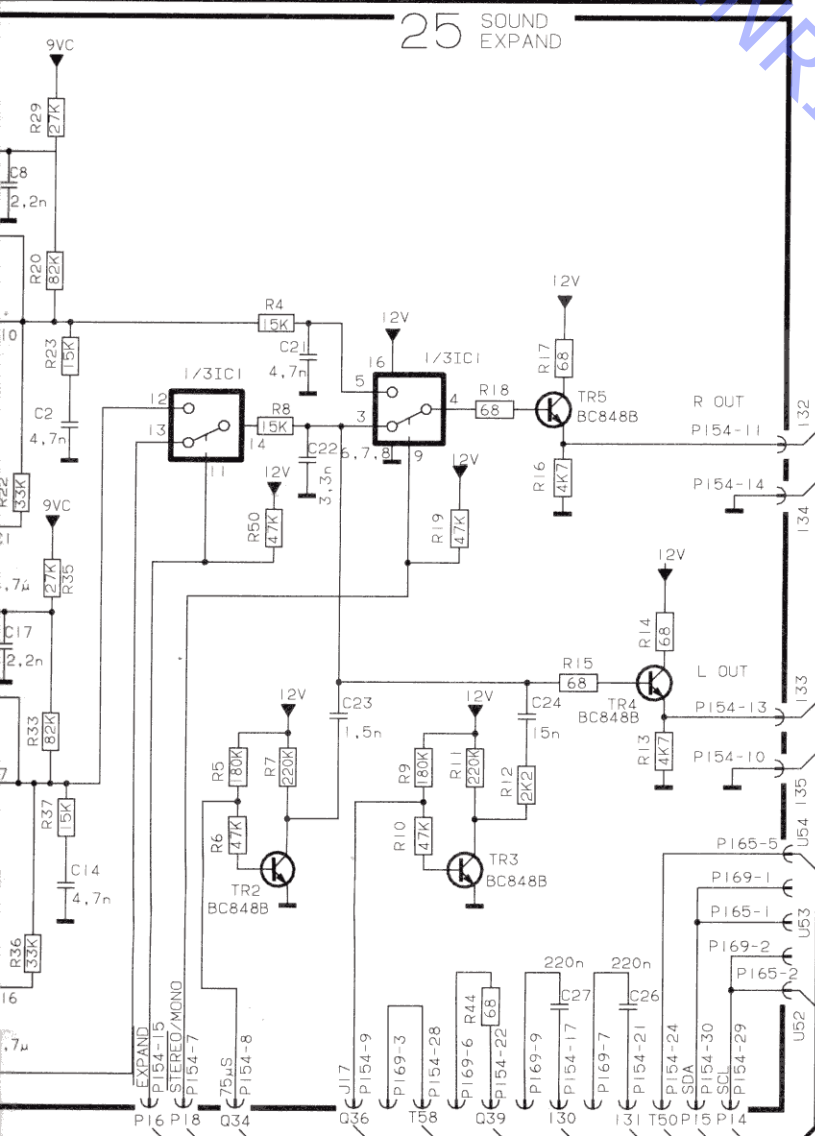


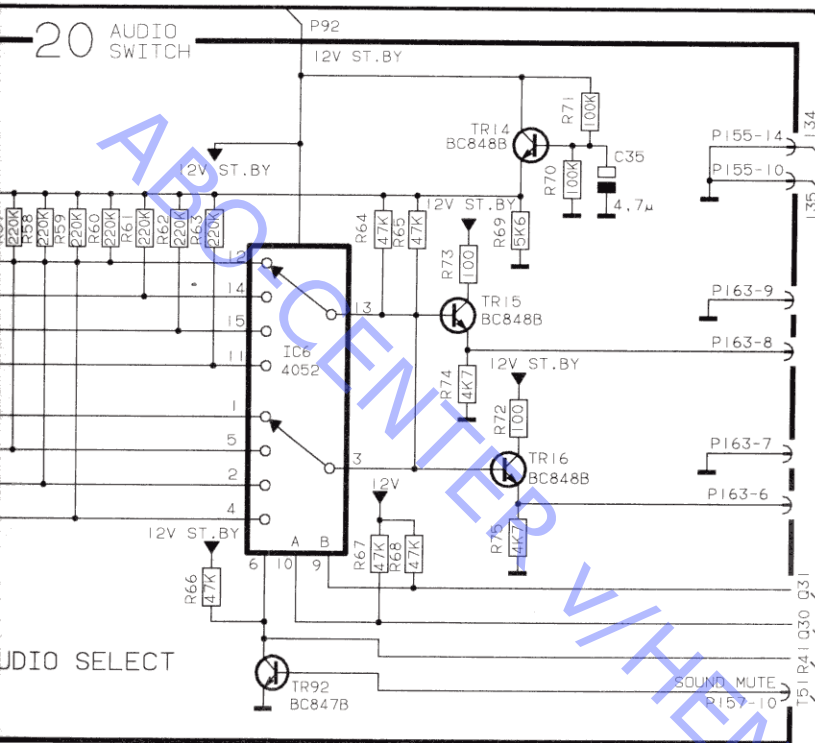




BEOSAT LM	BEOVISION
P163-1	P50-1
P163-2	P50-2
P163-3	P50-3
P163-4	P50-4
P163-5	P50-5
P163-6	P50-6
P163-7	P50-7
P163-8	P50-8
P163-9	P50-9

DIAGRAM T MICROPROCESSOR

2 | MICROPROCESSOR, EPROM

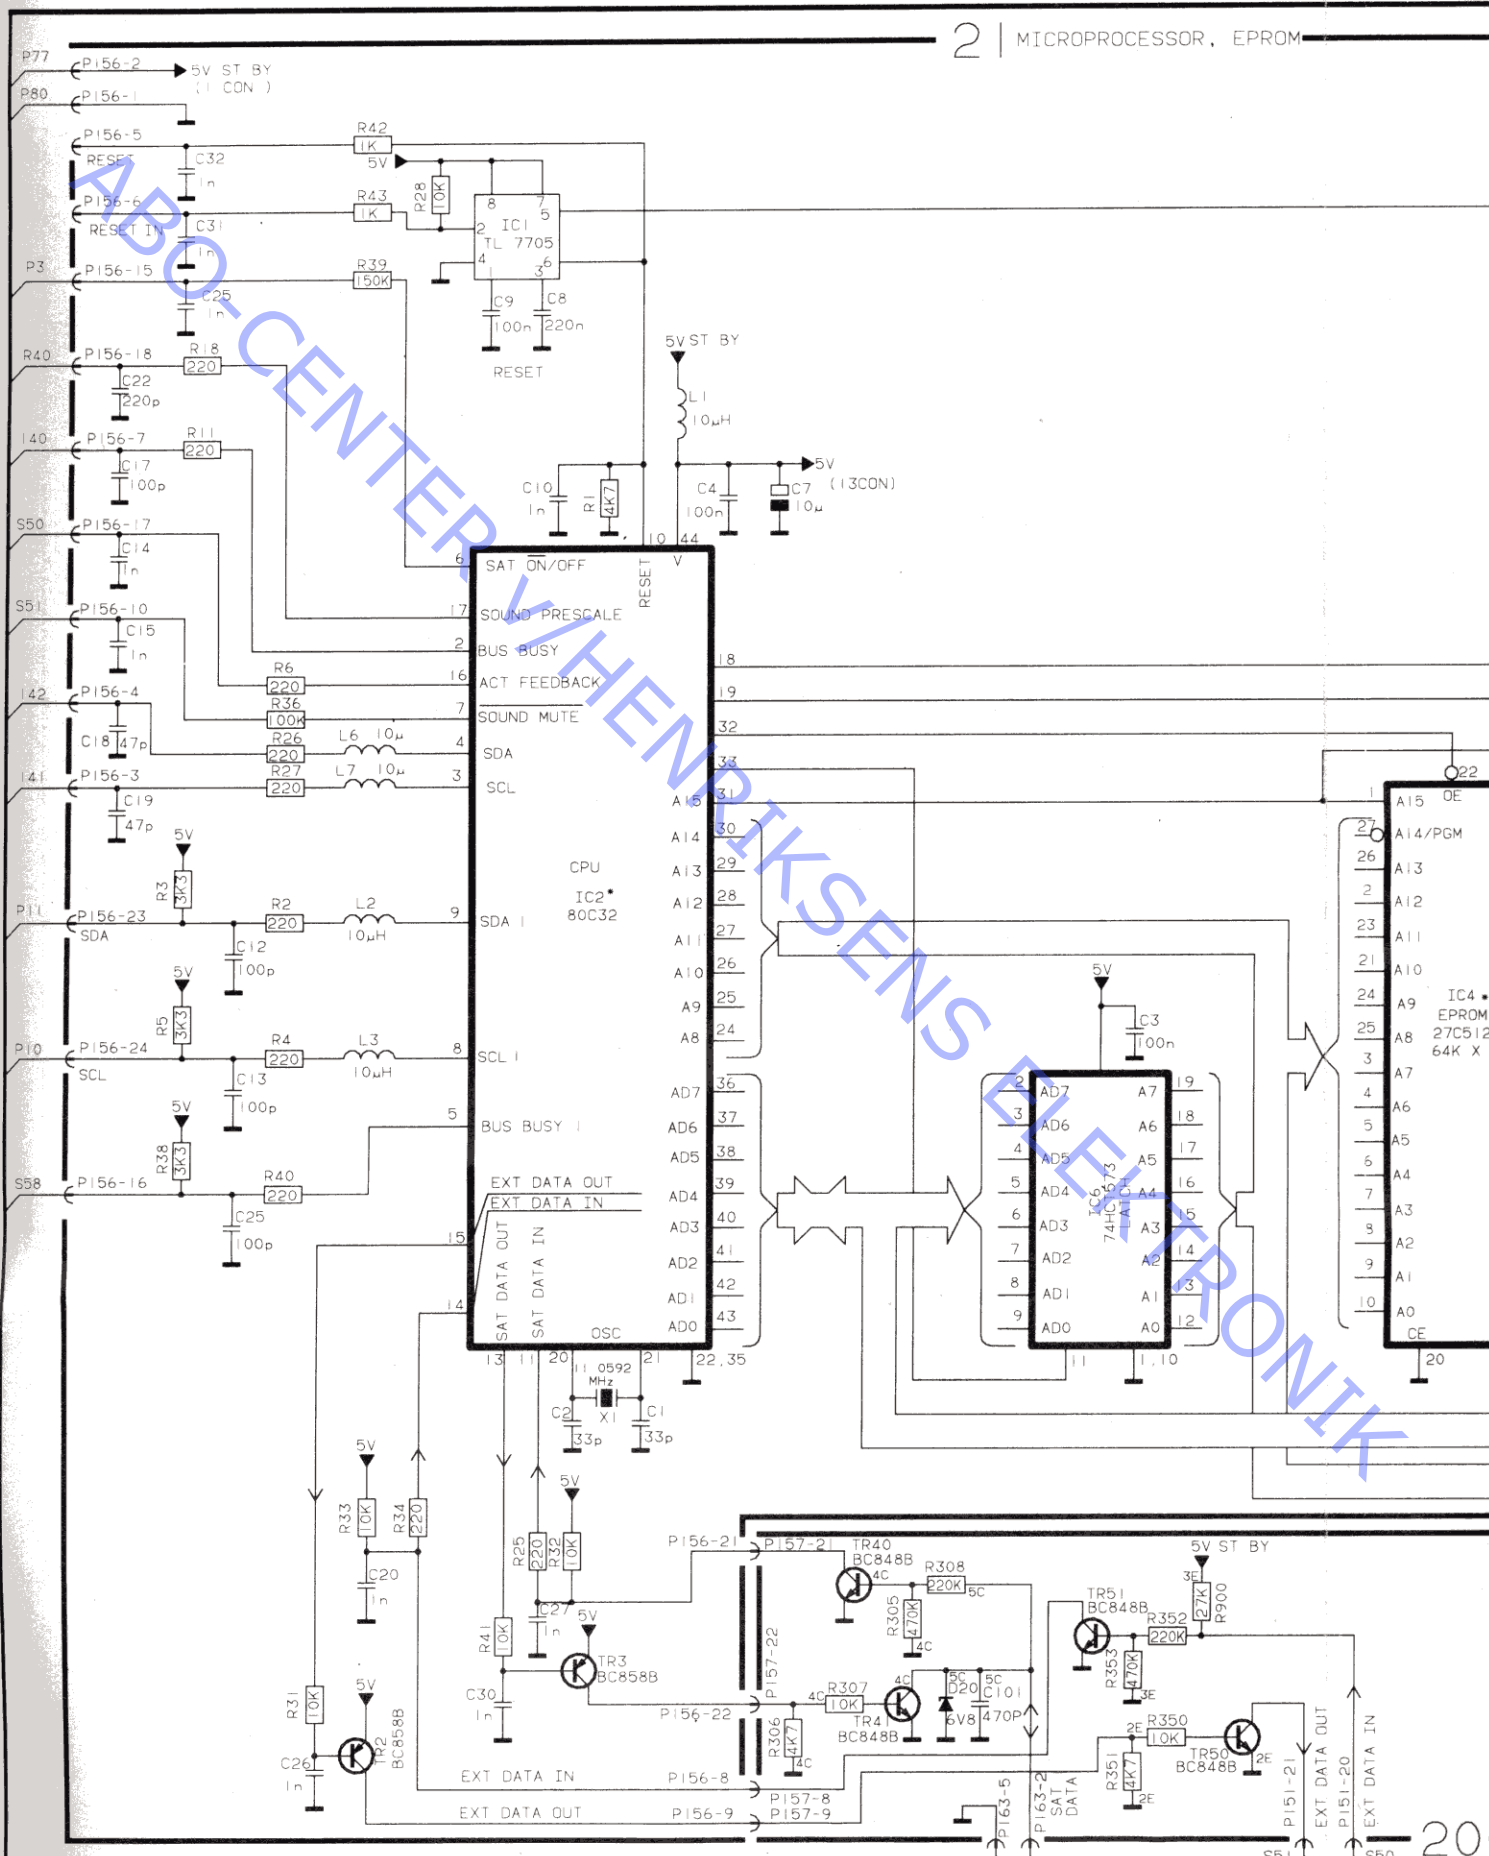

ROCESSOR, EPROM

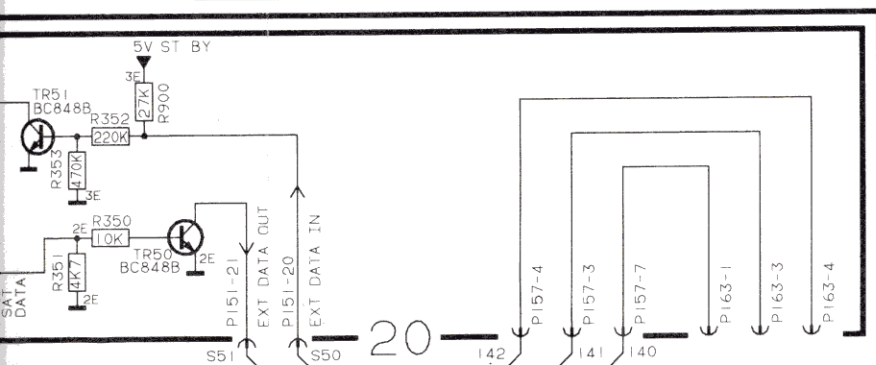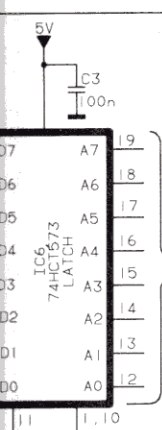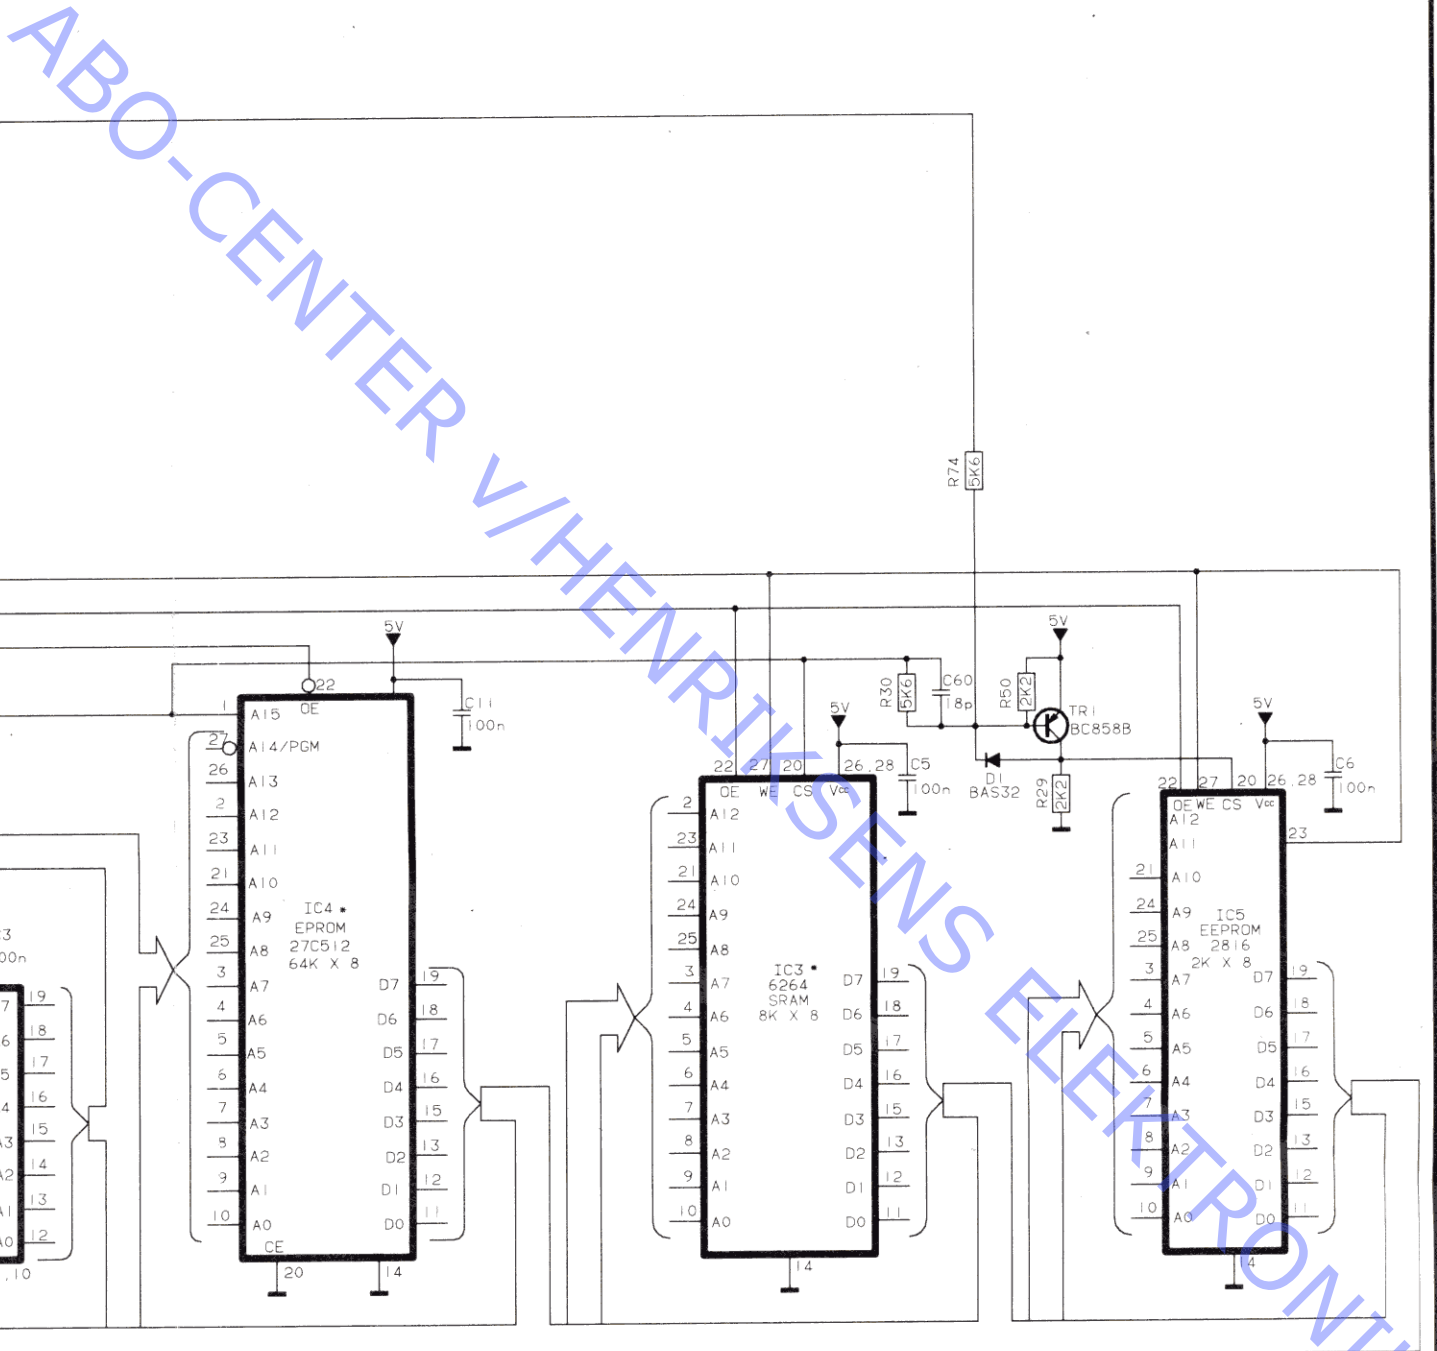

BEOSAT LM	BEOVISION
P163-1	P50-
P163-2	P50-2
P163-3	P50-3
P163-4	P50-4
P163-5	P50-5
P163-6	P50-6
P163-7	P50-7
P163-8	P50-8
P163-9	P50-9

ABO-CENTER V/HENRIKSENS ELEKTRONIK