 


AVAILABLE PARTS

BeoVision 1 (Update II) – BeoVision 1 L

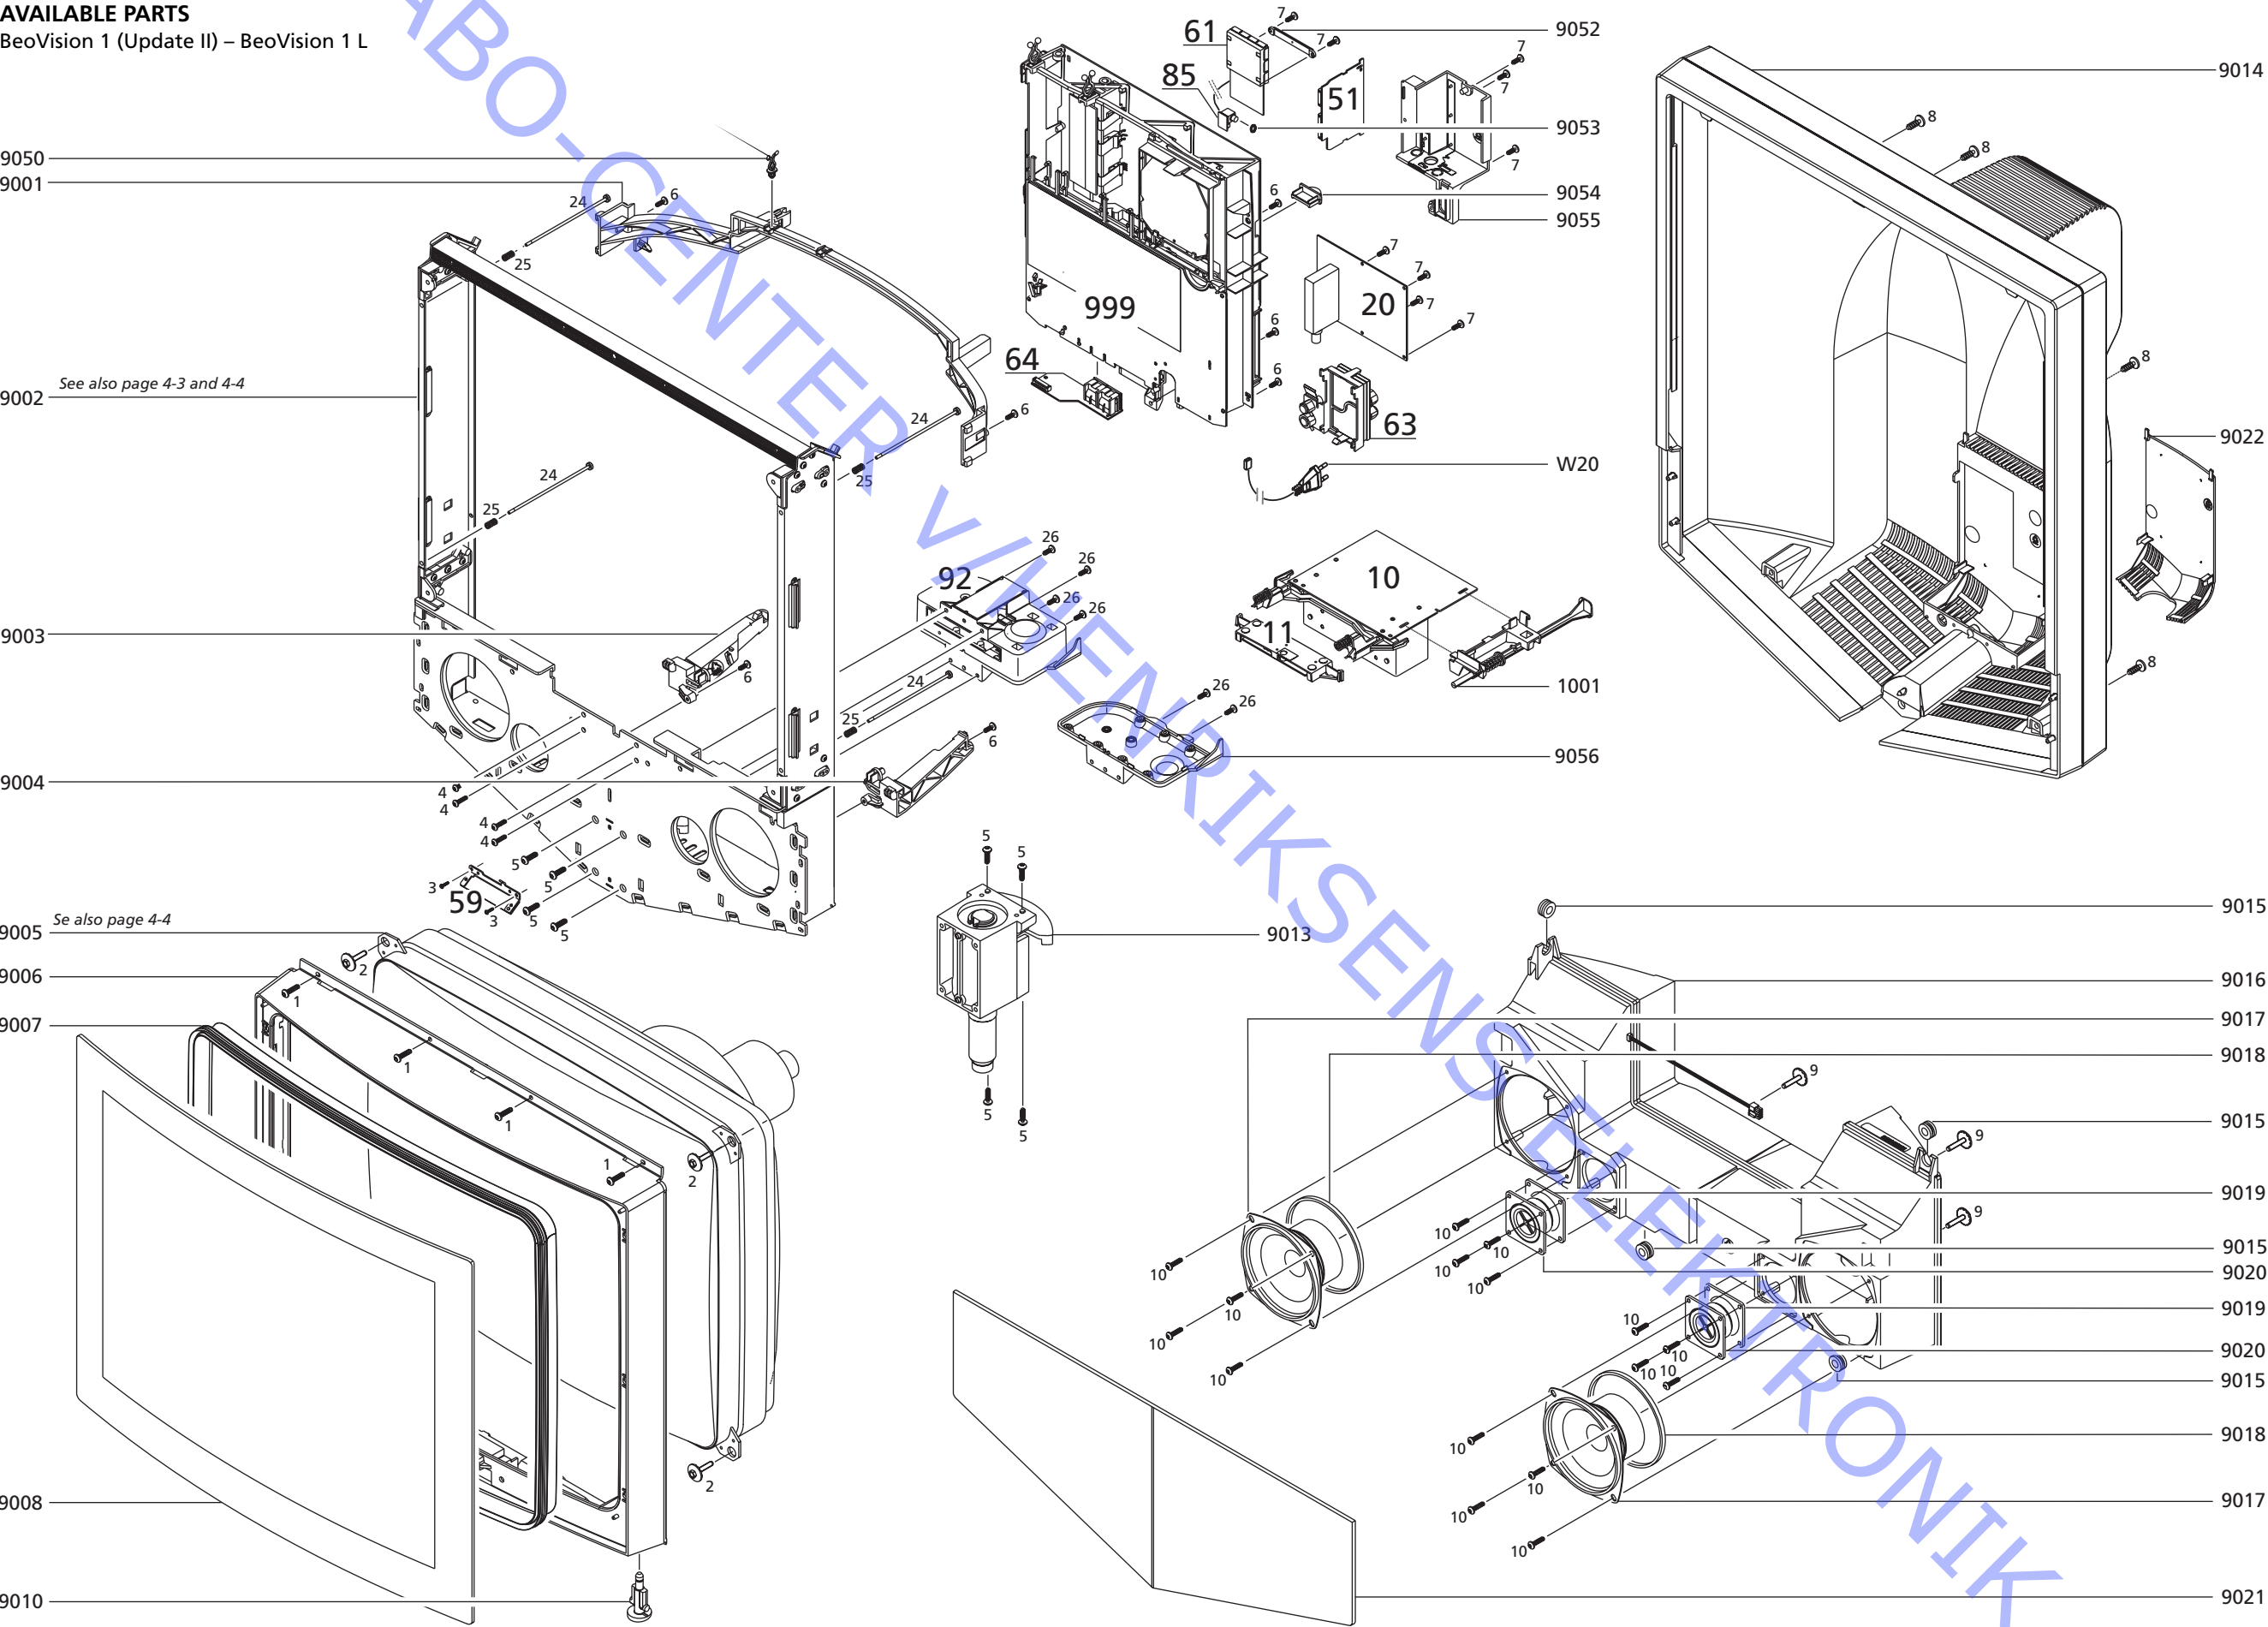


BeoVision 1 (Update II) – BeoVision 1 L	9001	3151615	Holder f/chassis	9018	3340097	Gasket f/woofer
	9002	8052650	Frame f/picture tube, complete	9019	3340098	Gasket f/tweeter
	9003	3151546	Holder f/chassis, left	9020	8480292	Tweeter
	9004	3151545	Holder f/chassis, right	9021	3320436	Cloth front, blue
	9005	8200111	Picture tube		3320437	Cloth front, green
	9006	3320448	Frame f/contrast screen incl. pos. no. 9010		3320438	Cloth front, red
	9007	3340185	Gasket f/contrast screen		3320439	Cloth front, grey
	9008	3451725	Contrast screen	9022	3320432	Cloth front, black
	9010	2391105	Blind plug		3320435	Cloth front, yellow
	9013	3130147	Turn mechanism		3440210	Cable cover, blue
	9014	3440192	Back cover, blue		3440211	Cable cover, green
		3440193	Back cover, green		3440212	Cable cover, red
		3440194	Back cover, red		3440213	Cable cover, grey
		3440195	Back cover, grey	9052	3440214	Cable cover, black
		3440196	Back cover, black	9053	3440215	Cable cover, yellow
		3440197	Back cover, yellow	9054	3151607	Holder f/PCB61
	9015	2937313	Rubber bushing	9055	2380145	Nut f/PCB85
	9016	3440200	Loudspeaker box, complete w/speakers	9056	3162778	Cover f/Masterlink
	9017	8480214	Woofers		3160241	Cover f/socketpanel
					3131422	Cover (when Motor Stand not used)
W20	6100325	Mains lead EU				
	6100404	Mains lead GB				
	6100391	Mains lead 4.5m				
6Module		PCB6, Main microcomputer				
6IC3&6IC6	8344047	EPROM				
PCB6, Main microcomputer is not available as spare part						
10Module	8006503	PCB10, Sound Output incl. pos. no. 1001				
1001	2776642	Button f/mains switch				
11Module	8006501	PCB11, IR Receiver				
20Module	8006504	PCB20, Satellite				
51Module	8000568	PCB51, Masterlink				
59Module	8005688	PCB59, Camcorder Interface				
61Module	8005946	PCB61, STB-Controller				
63Module	8000521	PCB63, Splitter & Modulator, system B/G				
	8000522	PCB63, Splitter & Modulator, system I				
64Module	8000539	PCB64, Powerlink				
85Module	8008903	Jack STB-Controller				
92Module	8006502	PCB92, Motor stand, complete				
999Module	Main chassis consist of PCB1, PCB3, PCB4, PCB6, PCB74					
	8053457	Main chassis, system B/G				
	8053458	Main chassis, system B/G/D/K/M/I				
	8053459	Main chassis, system B/G/L/L'/I/D/K				
Survey of screws	1	2054025	Screw 4 x 10mm	8	2052019	Screw 5 x 14mm
	2	2044047	Screw 5 x 15mm	9	2052025	Screw 4 x 12mm
	3	2013176	Screw 3 x 6mm	10	2013123	Screw 3 x 10mm
	4	2054027	Screw 4 x 8mm	24	2044080	Screw 3.5 x 125mm
	5	2013223	Screw 4 x 10mm		2042077	Screw 3 x 125mm
	6	2019021	Screw 4 x 12mm	25	2816361	Spring
	7	2013137	Screw 3 x 10mm	26	2042074	Screw 4 x 8mm

Wire bundles

See wiring diagram page 9.11 and 9.12.

The part no. is printed on the diagram above the wire bundle, as shown.

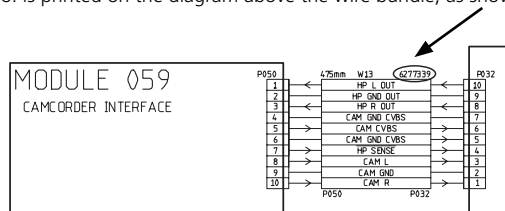**Parts not shown**

3658271	Product cover
2752068	Service stand
3395186	Back-up suitcase, system B/G
3395187	Back-up suitcase, system B/G/D/K/M/I
3395188	Back-up suitcase, system B/G/L/L'/I/D/K

Accessories

See specification guidelines page 9.3 for BeoVision 1 (Update II)

See specification guidelines page 9.5 for BeoVision 1 L

Available documentation

3508412	Guide, Danish
3508413	Guide, Swedish
3508414	Guide, Finnish
3508415	Guide, English
3508416	Guide, German
3508417	Guide, Dutch
3508418	Guide, French
3508419	Guide, Italian
3508420	Guide, Spanish
3508421	Guide, Portuguese
3508422	Guide, Russian
3503909	Reference Book, Danish
3500910	Reference Book, Swedish
3503911	Reference Book, Finnish
3503912	Reference Book, English
3503913	Reference Book, German
3503914	Reference Book, Dutch
3503915	Reference Book, French
3503916	Reference Book, Italian
3503917	Reference Book, Spanish
3503918	Reference Book, Portuguese
3503919	Reference Book, Russian
3543338	On-site service guide - English, German, French, Italian, Spanish, Danish, Dutch

All other available parts

All other available parts, see chapter 4.